

V1.7 2026-10-16

Grid-Tied PV Inverter GT Series

- GW75K-GT-LV-G10
- GW100K-GT
- GW110K-GT
- GW125K-GT

User Manual

GOODWE

Copyright Notice

Copyright © GoodWe Technologies Co., Ltd. 2026. All rights reserved.

No part of this manual may be reproduced or distributed in any form, or uploaded to public networks or other third-party platforms, without authorization from GoodWe Technologies Co., Ltd.

Trademark Authorization

GOODWE and the other GOODWE trademarks used in this manual are owned by GoodWe Technologies Co., Ltd. All other trademarks or registered trademarks mentioned in this manual are the property of their respective owners.

NOTICE

This document may be updated periodically due to product version upgrades or other reasons. Unless otherwise specified, the content of this document does not replace the safety precautions on the product labels. All descriptions in this document are for guidance only.

Preface

Overview

This manual mainly describes the inverter's product information, transportation and storage, installation and wiring, configuration and commissioning, troubleshooting, and maintenance. Before installing or using the product, read this manual carefully to understand the product safety information and become familiar with its functions and features. Keep this manual in a safe place for future reference.

The illustrations in this manual are for conceptual reference only and may differ from the actual product. The actual product shall prevail.

This manual is updated periodically, Please obtain the latest version of the materials and more product information from the official website: en.goodwe.com.

Applicable Products

This document applies to the following inverter models:

Model	Rated Output Power	Rated Output Voltage
GW75K-GT-LV-G10	75kW	127/220, 3L/N/PE or 3L/PE
GW100K-GT	100kW	380/400 V, 3L/N/PE or 3L/PE
GW110K-GT	110kW	
GW125K-GT	125kW	

Definition of Symbols



Indicates a high potential hazard that, if not avoided, will result in death or serious injury.

 WARNING

Indicates a moderate potential hazard that, if not avoided, could result in death or serious injury.

 CAUTION

Indicates a low potential hazard that, if not avoided, may result in moderate or minor injury.

NOTICE

Emphasizes or supplements information, and may also provide tips or tricks for optimizing product use to help you solve a problem or save time.

Table of Contents

1 Safety Precautions	7
1.1 General Safety	7
1.2 Personnel Requirements	10
1.3 PV String Safety	11
1.4 Inverter Safety	12
1.5 EU Declaration of Conformity	13
1.5.1 Devices with Wireless Communication Functions	13
1.5.2 Devices Without Wireless Communication Functions	13
2 Safety Symbols and Certification Marks	15
3 Product Overview	18
3.1 Introduction	18
3.2 Circuit Diagram	18
3.3 Supported Grid Types	19
3.4 Appearance	20
3.4.1 Appearance	20
3.4.2 Product Dimensions	22
3.4.3 Indicator Description	22
3.4.4 Nameplate Description	23
3.5 Features	24
3.6 Inverter Operating Modes	27
4 Equipment Inspection and Storage	29

4.1 Equipment Inspection	29
4.2 Items Supplied	29
4.3 Equipment Storage	31
5 Installation	32
5.1 Installation Requirements	32
5.2 Installing the Inverter	35
5.2.1 Moving the Inverter	35
5.2.2 Installing the Inverter	36
6 Electrical Connections	40
6.1 Safety Precautions	40
6.2 Connecting the Protective Earth Conductor	41
6.3 Connecting the AC Output Cables	42
6.4 Connecting the DC Input Cables	46
6.5 Communication Connections	50
6.5.1 RS485 Communication Network Topology	50
6.5.2 Power Limitation and Load Monitoring	51
6.5.3 Connecting Communication Cables	57
6.5.4 Installing the Communication Module	61
6.5.5 Post-Wiring Procedures (Australia Only)	62
7 Equipment Commissioning	64
7.1 Pre-Energization Inspection	64
7.2 Energizing the Equipment	64

8 System Commissioning.....	66
8.1 LED Indicators and Buttons.....	66
8.2 Set the Inverter Parameters via the Display.....	66
8.2.1 Display Menu Overview.....	68
8.2.2 Inverter Parameter Overview.....	70
8.3 Configuring Inverter Parameters via the App.....	71
8.4 Monitoring the PV Plant via SEMS+.....	72
9 System Maintenance.....	74
9.1 De-Energizing the Inverter.....	74
9.2 Removing the Inverter.....	74
9.3 Decommissioning the Inverter.....	74
9.4 Troubleshooting.....	75
9.5 Periodic Maintenance.....	88
10 Technical Specifications.....	91
11 Terminology.....	102

1 Safety Precautions

Always observe the safety precautions contained in this document when operating the equipment.

WARNING

The equipment has been designed and tested in strict accordance with safety regulations. However, as electrical equipment, it must be handled in compliance with the relevant safety instructions. Improper operation may result in serious injury or property damage.

1.1 General Safety

DANGER

- Before making electrical connections, disconnect all upstream switches to ensure that the equipment is de-energized. Live work is strictly prohibited, as it may result in electric shock or other hazards.
- For equipment that supports PV string connections, the PV inputs have a low surge current withstand capability. Never use a DC voltage source to power the equipment directly through the PV ports. If power must be supplied through the PV ports, follow the steps below. Damage resulting from failure to follow these instructions is considered damage caused by improper operation and is not covered by the product warranty.
 1. First, limit the DC voltage source output current to within the maximum input current allowed at the PV ports.
 2. Then close the inverter's DC switch.
 3. Finally, slowly increase the DC source output voltage from 0 to the target value at a rate of ≤ 50 V/s.
- To prevent personal injury or equipment damage caused by live operation, a circuit breaker must be installed on the equipment's voltage input side.
- All activities, including transportation, storage, installation, operation, use, and maintenance, must comply with applicable laws, regulations, standards, and codes.

 DANGER

- The specifications of cables and components used for electrical connections must comply with local laws, regulations, standards, and codes.
- Use the cable connectors supplied with the equipment to connect its cables. The equipment manufacturer is not liable for equipment damage caused by using connectors of other models.
- Ensure that all equipment cables are connected correctly and securely, with no loose connections. Improper wiring may result in poor contact or equipment damage.
- The equipment protective earth conductor must be securely connected.
- To protect the equipment and its components from damage during transport, ensure that transport personnel are professionally trained. Record the handling steps during transport, keep the equipment balanced, and prevent it from falling.
- The equipment is heavy. Assign an appropriate number of personnel based on its weight to avoid exceeding safe manual handling limits and causing injury.
- Ensure that the equipment is placed securely and is not tilted. If it tips over, it may cause equipment damage or personal injury.

 WARNING

- During equipment installation, do not place any load on the wiring terminals, as this may damage them.
- Avoid applying excessive tension to cables, as this may result in poor connections. Leave an appropriate length of cable when wiring to ensure that the cables are not taut.
- Secure and support cables properly to prevent cable weight, tension, bending force, torsion, or other external mechanical stress from acting on terminals or connectors over time.
- Ensure that the protective earth conductor is securely connected and has sufficient slack. If subjected to unexpected tension or other external mechanical stress, the protective earth conductor must not disconnect before the other conductors.
- Bundle cables of the same type together. Route different types of cables at least 30 mm apart; do not intertwine or cross them.
- Using cables in high-temperature environments may cause their insulation to age or become damaged. Keep cables at least 30 mm away from heating components or the perimeter of heat-source areas.

NOTICE

- This document may be updated periodically due to product version upgrades or other reasons. Unless otherwise specified, the content of this document does not replace the safety precautions on the product labels. All descriptions in this document are for guidance only.
- Before installing the equipment, read this document carefully to understand the product and its precautions.
- All work on the equipment must be performed by qualified electrical professionals who are familiar with the applicable standards and safety codes in the project location.
- When working on the equipment, use insulated tools and wear personal protective equipment to ensure personal safety. When handling electronic components, wear anti-static gloves and a wrist strap, and use anti-static clothing to protect the equipment from electrostatic discharge damage.
- Unauthorized disassembly or modification may damage the equipment. Such damage is not covered by the warranty.
- The equipment manufacturer is not liable for equipment damage or personal injury resulting from installation, use, or configuration that does not comply with this document or the applicable user manual. For more information about the product warranty, visit the official website: <https://www.goodwe.com/warrantyrelated.html>.

1.2 Personnel Requirements

NOTICE

To ensure safe, compliant, and efficient equipment transportation, installation, wiring, operation, and maintenance, all work must be performed by professional or qualified personnel.

1. Qualified or authorized personnel include:

- Personnel who understand the equipment's operating principles, system structure, and relevant risks and hazards, and who have received professional operating training or have extensive practical experience.
- Personnel who have received relevant technical and safety training, have some operating experience, can recognize the hazards that specific tasks may pose to them, and can take protective measures to minimize risks to themselves and others.
- Qualified electrical personnel meeting the regulatory requirements of the country/region where the work is performed.
- Personnel holding a degree in electrical engineering, an advanced diploma in an electrical discipline, or an equivalent qualification; or professionally qualified in the electrical field, with at least 2/3/4 years of experience in testing and supervising work in accordance with electrical equipment safety standards.

2. Personnel performing special tasks, such as electrical work, work at height, or operation of special equipment, must hold valid qualification certificates required at the equipment's location.

3. Medium-voltage equipment must be operated by a licensed high-voltage electrician.

4. Only authorized personnel may replace equipment and components.

1.3 PV String Safety

WARNING

- Ensure that the module frames and mounting system are properly grounded.
- After connecting the DC cables, ensure that all connections are secure and tight. Improper wiring may result in poor contact or high impedance and damage the inverter.
- Use a multimeter to measure the positive and negative poles of the DC cables. Ensure that the polarity is correct and not reversed, and that the voltage is within the allowable range.
- Use a multimeter to measure the DC cables. Ensure that the polarity is correct and not reversed, and that the voltage is below the maximum DC input voltage. The equipment manufacturer is not liable for damage caused by reverse polarity or overvoltage.
- PV string outputs do not support grounding. Before connecting a PV string to the inverter, ensure that the minimum insulation resistance to ground of the PV string meets the minimum insulation resistance requirement ($R = \text{maximum input voltage (V)} / 30 \text{ mA}$).
- Do not connect the same PV string to multiple inverters, as this may damage the inverters.
- PV modules used with the inverter must comply with IEC 61730 Class A.
- When the PV string input voltage or input current is high, the inverter output power may be derated.

1.4 Inverter Safety

WARNING

- Ensure that the voltage and frequency at the point of grid connection comply with the inverter's grid connection specifications.
- It is recommended to install protective devices such as a circuit breaker or fuse on the AC side of the inverter. The rating of the protective device must be greater than 1.25 times the maximum AC output current of the inverter.
- If the inverter triggers an arc fault alarm fewer than five times within 24 hours, the alarm can be cleared automatically. After the fifth arc fault alarm, the inverter will shut down for protection. The fault must be cleared before the inverter can resume normal operation.
- If no battery is configured in the PV system, using the BACK-UP function is not recommended; otherwise, there may be a risk of power loss in the system.
- Changes in grid voltage and frequency may cause the inverter output power to be derated.

1.5 EU Declaration of Conformity

1.5.1 Devices with Wireless Communication Functions

GoodWe Technologies Co., Ltd. hereby declares that devices with wireless communication functions offered for sale in the European market comply with the requirements of the following directives:

- Radio Equipment Directive 2014/53/EU (RED)
- Restrictions of Hazardous Substances Directive 2011/65/EU and (EU) 2015/863 (RoHS)
- Waste Electrical and Electronic Equipment 2012/19/EU
- Registration, Evaluation, Authorization and Restriction of Chemicals (EC) No 1907/2006 (REACH)

1.5.2 Devices Without Wireless Communication Functions

GoodWe Technologies Co., Ltd. hereby declares that devices without wireless communication functions offered for sale in the European market comply with the requirements of the following directives:

- Electromagnetic compatibility Directive 2014/30/EU (EMC)
- Electrical Apparatus Low Voltage Directive 2014/35/EU (LVD)
- Restrictions of Hazardous Substances Directive 2011/65/EU and (EU) 2015/863 (RoHS)
- Waste Electrical and Electronic Equipment 2012/19/EU
- Registration, Evaluation, Authorization and Restriction of Chemicals (EC) No 1907/2006 (REACH)

2 Safety Symbols and Certification Marks

DANGER

- After installation, labels and warning signs on the enclosure must remain clearly visible. Do not cover, alter, or damage them.
- The following descriptions of enclosure warning labels are for reference only. Refer to the labels actually affixed to the equipment.

No.	Symbol	Description
1		Potential hazards exist while the equipment is operating. Use appropriate protection when operating the equipment.
2		High-voltage hazard. High voltage is present while the equipment is operating. Ensure the equipment is de-energized before working on it.
3		The equipment surface becomes hot. Do not touch the equipment while it is operating, or burns may result.
4		Use the equipment as intended. Use under extreme conditions may create a risk of explosion.
5		The battery contains flammable materials. Keep away from fire.
6		The equipment contains corrosive electrolyte. Avoid contact with leaking electrolyte or vapors.
7		Delayed discharge. After de-energizing the equipment, wait 5 minutes for it to fully discharge.
8		Keep the equipment away from open flames and sources of ignition.


No.	Symbol	Description
9		Keep the equipment out of reach of children.
10		Use the equipment as intended. Use under extreme conditions may create a risk of explosion.
11		The battery contains flammable materials. Keep away from fire.
12		Do not lift the equipment after the battery system has been wired or while it is operating.
13		Do not extinguish with water.
14		Read the product manual carefully before operating the equipment.
		
15		Wear personal protective equipment during installation, operation, and maintenance.
16		Do not dispose of the equipment as household waste. Dispose of it in accordance with local laws and regulations, or return it to the equipment manufacturer.
17		Protective earth connection point.
18		Recycling symbol. Place the equipment in the appropriate collection location and recycle it in accordance with local environmental regulations.
19		CE marking.

No.	Symbol	Description
20		RCM marking.


3 Product Overview

3.1 Application Scenarios

The GT series inverters are three-phase string-type grid-tied PV inverters. They convert the DC power generated by PV modules into AC power that meets grid requirements and feed it into the grid. The inverters are primarily used in the following scenarios:

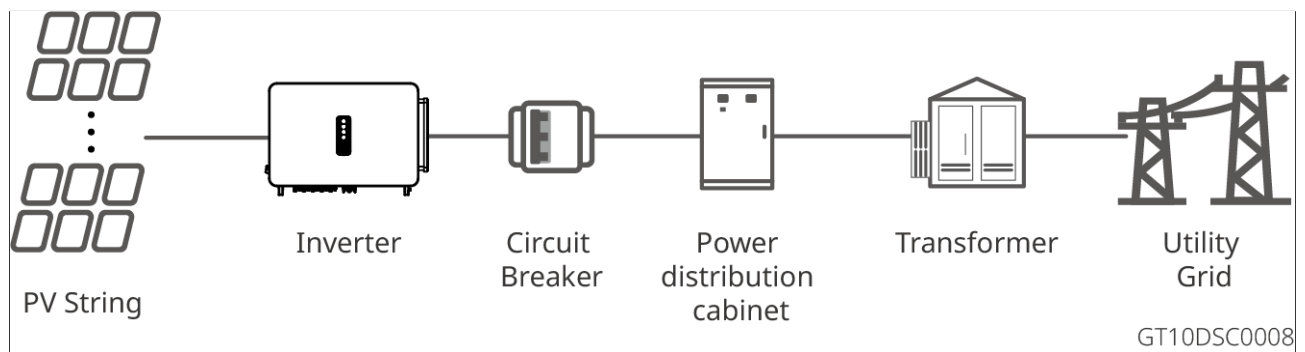

Model Description

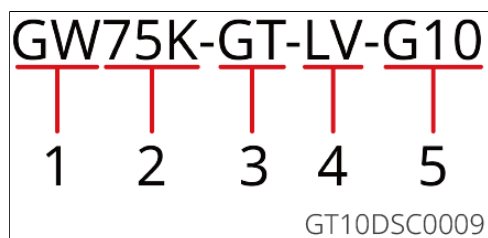


No.	Description	Description
1	Brand Code	GW: GoodWe
2	Rated Power	75K: rated power of 75 kW
3	Series Name	GT: GT series
4	Grid Type	LV: low-voltage grid
5	Version Code	G10: First-generation product


3.2 Circuit Diagram

The main circuit diagrams for the GW75K-GT-LV-G10 and GW100K-GT are shown

below:

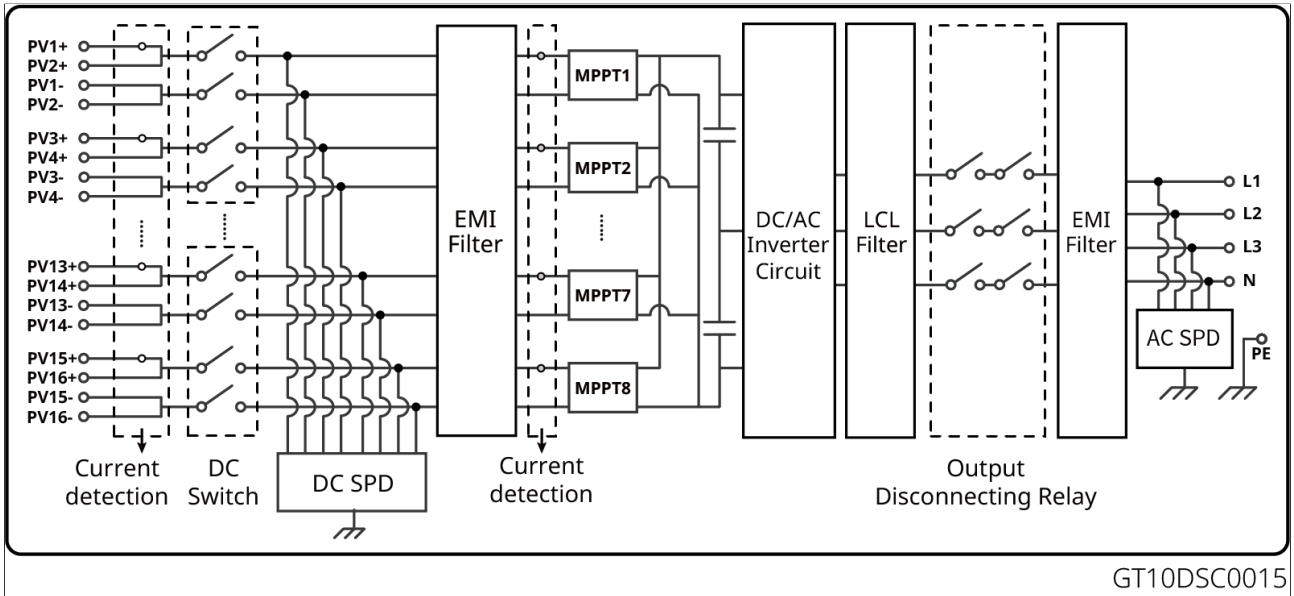

The main circuit diagrams for the GW110K-GT and GW125K-GT are shown below:

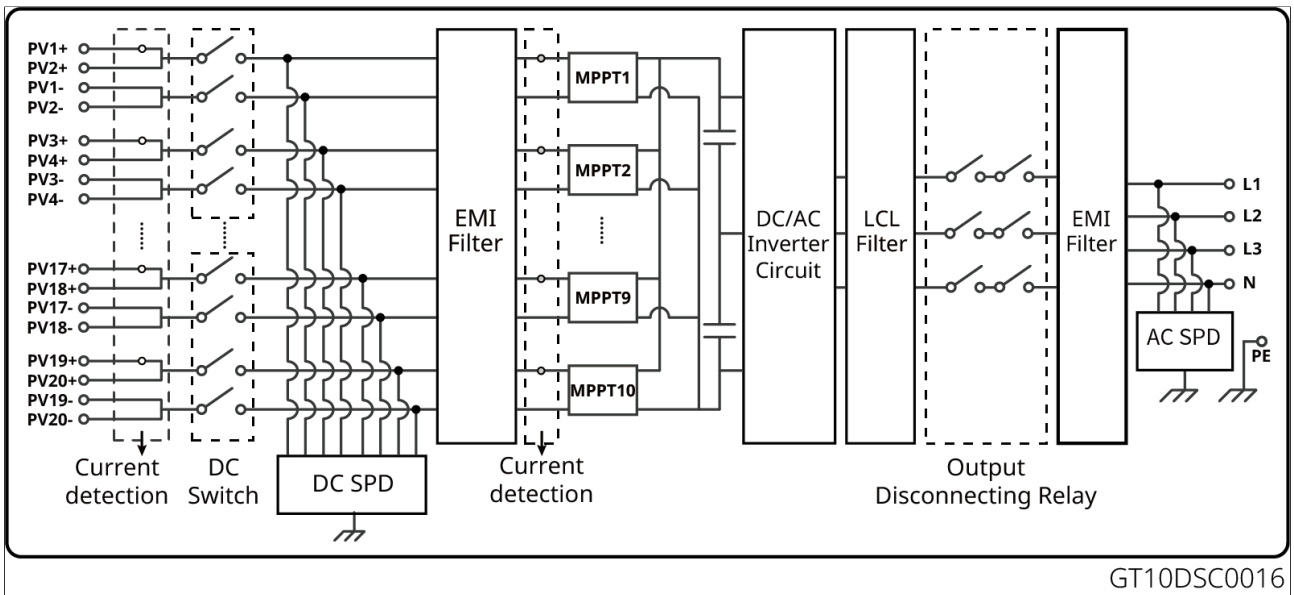


3.3 Supported Grid Types

The GW75K-GT-LV-G10, GW100K-GT, GW110K-GT, and GW125K-GT support the following grid types: TN-S, TN-C, TN-C-S, TT, and IT, as shown below:

NOTICE


For a TT grid configuration, the RMS voltage between the neutral and ground conductors must be less than 20 V.

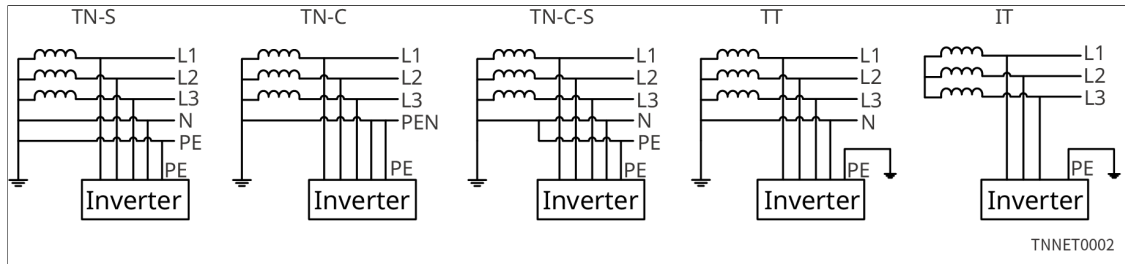

3.4 Appearance and Dimensions

The color and appearance may vary between inverter models. Refer to the actual product.


3.4.1 Appearance

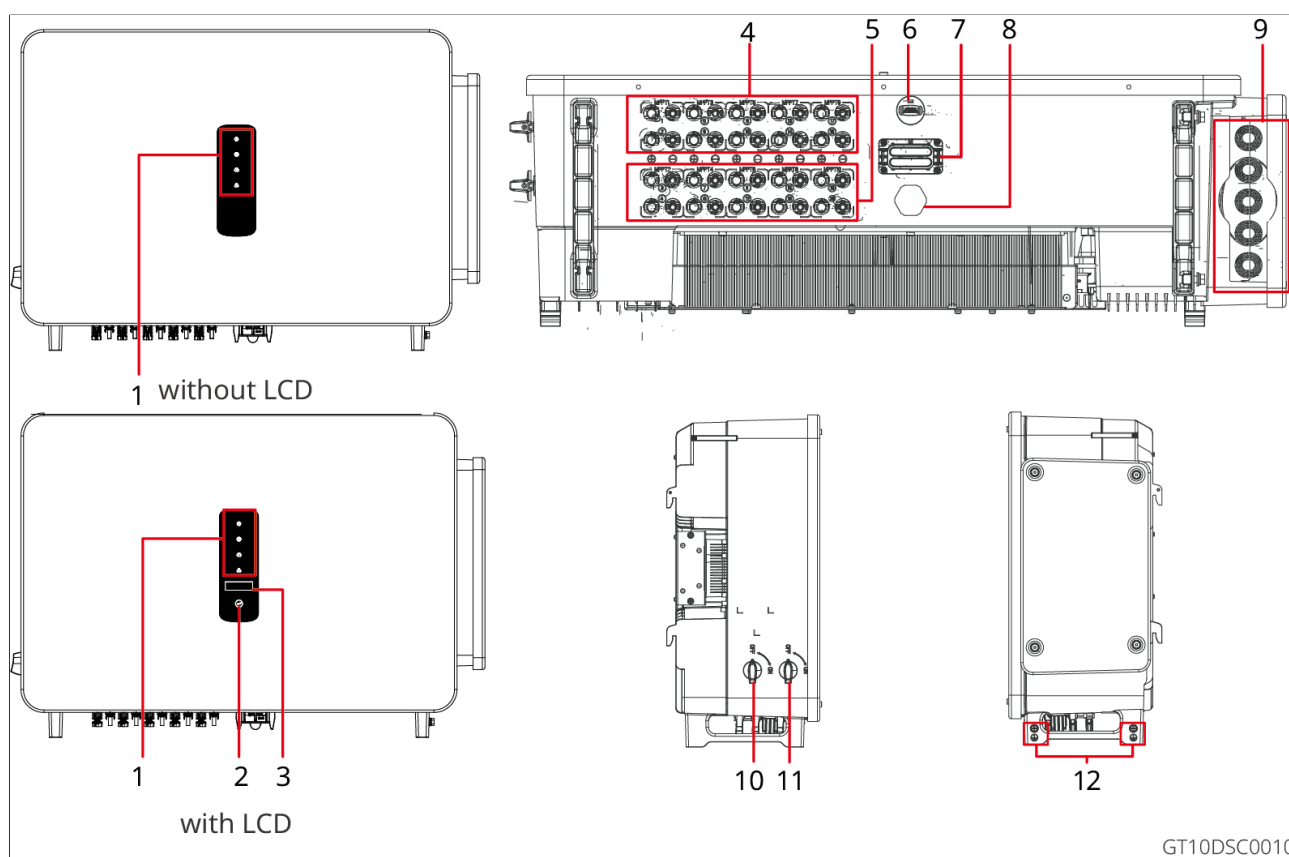

No.	Component	Description
1	Indicator	Indicates the inverter operating status
2	Buttons (optional)	For operating the display
3	Display (optional)	View inverter data
4	DC terminals	For connecting DC input cables from PV modules GW75K-GT-LV-G10 and GW100K-GT: MPPT1/3/5/7; GW110K-GT and GW125K-GT: MPPT1/3/5/7/9
5	DC terminals	For connecting DC input cables from PV modules GW75K-GT-LV-G10 and GW100K-GT: MPPT2/4/6/8; GW110K-GT and GW125K-GT: MPPT2/4/6/8/10
6	USB port	For connecting communication modules such as WiFi and 4G

7	Communication Port	Provides multiple communication interfaces, such as RS485 and DRED, for connecting communication cables for the corresponding functions
8	Breather valve	Provides waterproof ventilation to balance internal and external air pressure
9	AC cable entry hole	AC output cable exits through the opening
10	DC Switch 2	Controls connection or disconnection of MPPT2/4/6/8/10 or MPPT2/4/6/8
11	DC switch 1	Controls connection or disconnection of MPPT1/3/5/7/9 or MPPT1/3/5/7
12	Protective earth terminal	Connecting the Protective Earth Conductor

3.4.2 Product Dimensions

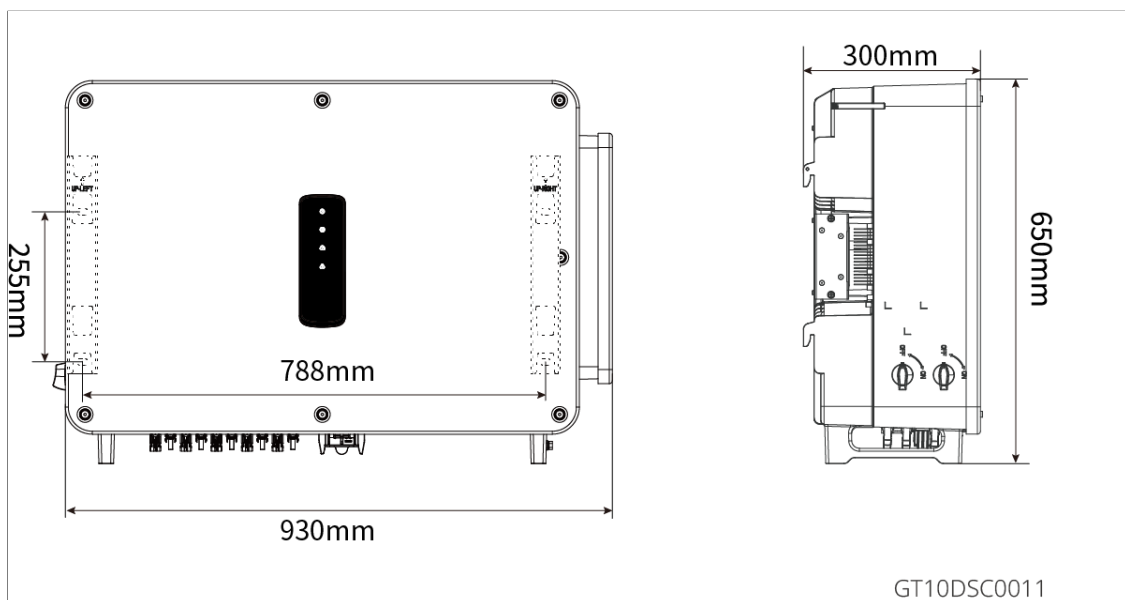

3.4.3 Indicator Description

Indicator	Status	Description
-----------	--------	-------------

 电源 Power		Steady on: The device is powered on
		Off: The device is not powered on
 运行 Operation		Steady on: The grid is normal and grid connection is successful
		Off: Not connected to the grid
		One slow flash: Pre-grid-connection self-check
		One quick flash: About to connect to the grid
 通信 Communi- cation		Steady on: Wireless monitoring is operating normally
		One flash: Wireless module reset or reboot
		Two flashes: Not connected to a base station or router
		Four flashes: Not connected to the monitoring server
		Flashing: RS485 communication is operating normally
		Off: The wireless module is restoring its factory settings
 故障 Fault		Steady on: System fault
		Off: No fault

3.4.4 Nameplate Description

The nameplate is for reference only. Please refer to the actual product.

GOODWE	
Product: Grid-Tied PV Inverter Model : *****_**_**	
PV Input	UDCmax: **** Vd.c.
	UMPP: ** ... ** Vd.c.
	IDC,max: ** Ad.c.
	ISC PV: ** Ad.c.
Output	UAC,r: ** Va.c.
	fAC, r: ** Hz
	PAC,r: ** kW
	IAC,max: ** Aa.c.
	SR: ** kVA
	Smax: ** kVA
P.F.: -*, **cap...,**ind Toperating: -**-** °C Non-isolated, IP**, protective Class I, OVC DCII/ACIII	
S/N:	
***** Co., Ltd. E-mail: *****@*****.com *****	
S/N	

1	2	3	4
GoodWe trademark, product type, and model	Product Technical Specifications	Product Safety Symbols and Certification Marks	Contact Information and Serial Number

3.5 Features

AFCI

The inverter integrates an AFCI circuit protection device to detect arc faults and quickly disconnect the circuit when one is detected, thereby preventing electrical fires.

Causes of arc faults:

- Damaged connections between connectors in the PV system.

- Incorrectly connected or damaged cables.
- Aged connectors or cables.

Troubleshooting:

- The inverter integrates AFCI functionality and complies with IEC 63027.
- When the inverter detects an arc fault, you can use the app to view the time of the alarm and the alarm details.
- If the inverter triggers an AFCI alarm, it will shut down for protection. After the alarm is cleared, the inverter will automatically reconnect to the grid and resume operation.
 - Automatic reconnection: If the inverter triggers an AFCI alarm fewer than 5 times within 24 hours, the alarm will be cleared automatically after five minutes, and the inverter will reconnect to the grid and resume operation;
 - Manual reconnection: If the inverter triggers an AFCI alarm for the fifth time within 24 hours, the alarm must be cleared manually before the inverter can reconnect to the grid and resume operation. For details, refer to the SolarGo App User Manual.

PID recovery (optional)

During PV module operation, the potential difference between the output electrodes and the grounded module frame can, over time, reduce power generation efficiency. This phenomenon is known as potential-induced degradation (PID).

The inverter's PID function suppresses PID by raising the voltage of the PV modules relative to their frames, creating a positive voltage bias (referred to as positive-bias elevation). It is suitable for P-type modules and N-type modules that require a raised positive bias to suppress PID. For N-type modules that require a reduced negative bias to suppress PID, it is recommended that this function be disabled. Consult the module supplier to determine whether an N-type module requires a raised positive bias for PID suppression.


Nighttime SVG (optional)

The nighttime SVG (Static Var Generator) function allows the inverter to provide reactive power compensation at night or when there is no solar input, improving the grid power factor, reducing grid losses, and maintaining voltage stability.

RSD (optional)

When used with a signal transmitter, the inverter can communicate with external

module-level shutdown devices. In an emergency, the transmitter can be stopped by opening the AC circuit breaker at the inverter output, cutting off its AC power supply and thereby shutting down the output of the PV strings.

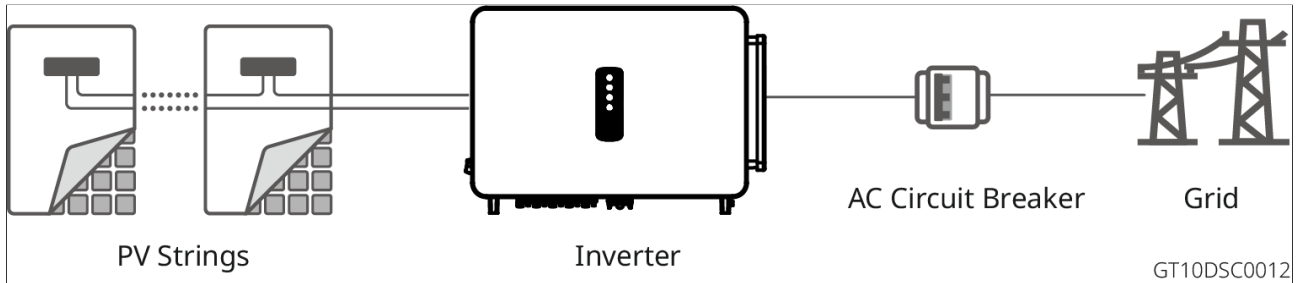


Communications

The inverter supports parameter configuration via Bluetooth using the SolarGo App. It can connect to the SolisCloud monitoring platform via Wi-Fi, 4G, or Wi-Fi + LAN. The SolisCloud App can be used to monitor the inverter's operating status, plant operation, and more.

- Bluetooth: Compliant with the Bluetooth 5.1 standard.
- Wi-Fi: Supports the 2.4 GHz band. The router must be configured for 2.4 GHz or a dual-band 2.4/5 GHz mode. The wireless network name (SSID) can contain up to 40 bytes.
- LAN: Supports connection to a router via LAN, and then connection to the cloud.
- 4G: Supports connection to the cloud via 4G communications.


The communications method depends on the inverter model.

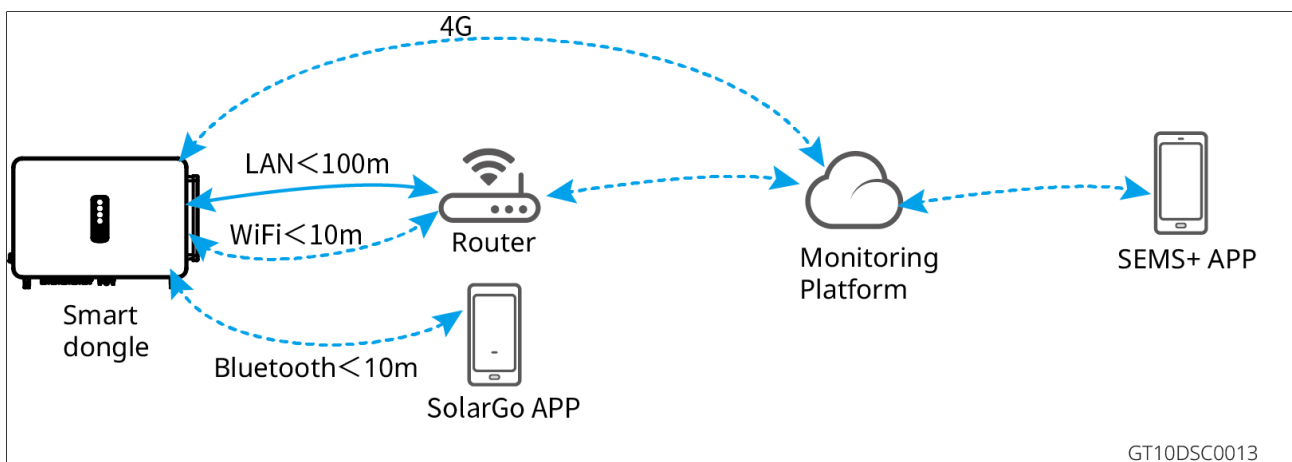

Fuse detection (optional, Korea models only)

- Detects whether the PV-side fuse is open. When the inverter detects an open fuse, it disconnects from the grid for protection. The fault type can be viewed on the inverter display or in the app.
- Fuse detection is available only when all inverter string inputs are connected.

3.6 Inverter Operating Modes

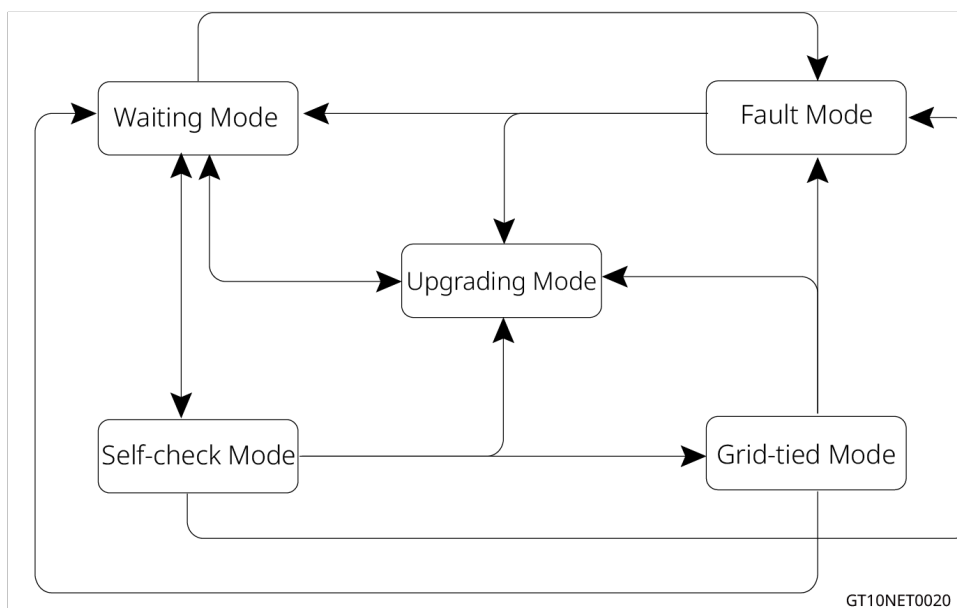

No.	Component	Description
1	Standby mode	The inverter enters the waiting phase after power-on. • When the conditions are met, the inverter enters self-check mode. • If a fault occurs, the inverter enters fault mode. • If an upgrade request is received, the inverter enters upgrade mode.

2	Self-check mode	Before startup, the inverter continuously performs self-checks, initialization, and other processes. • If the conditions are met, the inverter enters grid-connected mode and starts grid-connected operation. • If an upgrade request is received, the inverter enters upgrade mode. • If the self-check fails, the inverter enters fault mode. • If a shutdown command is received or the bus voltage is too low, the inverter enters standby mode.
3	Grid-connected mode	The inverter is operating normally in grid-connected mode. • If a fault is detected, the inverter enters Fault Mode. • If an upgrade request is received, the inverter enters upgrade mode. • If a remote command is received, the inverter enters standby mode.
4	Fault Mode	If a fault is detected, the inverter enters fault mode. Once the fault is cleared, it enters standby mode.
5	Upgrade Mode	The inverter enters this mode while updating its firmware. Once the update is complete, it enters standby mode.

4 Equipment Inspection and Storage

4.1 Equipment Inspection

Before accepting the product, carefully check the following:

1. Check the outer packaging for damage, such as deformation, punctures, cracks, or any other signs that may indicate damage to the equipment inside. If damaged, do not open the package and contact your distributor.
2. Check that the inverter model is correct. If it does not match, do not open the package and contact your distributor.
3. Check that the type and quantity of the delivered items are correct and that they are undamaged. If anything is damaged, contact your distributor.

4.2 Items Supplied

NOTICE

*1 Depending on the selected communication method, the number of built-in modules is either 1 or 2, and the number of bootlace ferrules is between 8 and 16.

*2 South Korea and Australia only.



*3 Smart communication dongle types include WiFi/4G/Bluetooth/WiFi+LAN, etc. The type shipped depends on the communication method selected for the inverter.











*4 The number of DC connectors matches the number of DC terminals on the inverter. Please confirm the quantity based on the number of DC terminals on the inverter.

*5 Korean models: N=3; other models: N=2

*6 Optional for the Australian SIB; standard for overseas markets; optional in China and must be ordered separately.

*7 Australia only.

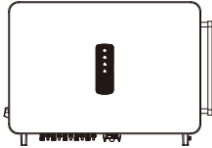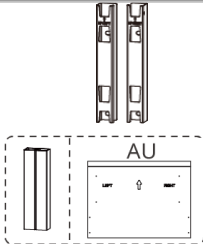Component	Quantity	Component	Quantity
	Inverter x 1		Wall-mount bracket + drilling template x 1 (AU*7)

       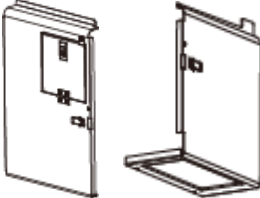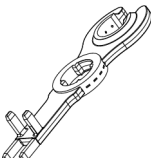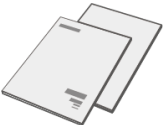	Built-in communication module x N ^{*1}		Integrated communication connector x 1
 or 	DC connector x N ^{*4}	  	PV protective cover x 1 (AU ^{*7})
   	M3 screw x 4 M5 screw x 6 Expansion bolt x 4 (AU ^{*7})		Bootlace ferrule x N ^{*2}
 or  or 	Smart communication dongle x 1 ^{*3}	 or  or 	DC connector wrench x N ^{*5}
	M5 hex socket screw x 2		Expansion bolt x 4
	Fuse ^{*2} x N		Product documentation x 1

	Handle x N*6		
---	--------------	--	--

4.3 Equipment Storage

If the equipment will not be put into operation immediately, store it according to the following requirements:


1. Ensure that the outer packaging is not opened and that the desiccant inside the package is intact.
2. Ensure that the storage environment is clean, with suitable temperature and humidity and no condensation.
3. Stack the inverters in the orientation and to the maximum height specified on the packaging labels.
4. Ensure that the stacked inverters are stable and cannot topple.
5. If the inverter has been in storage for more than two years, or has been installed but not operated for more than 6 months, have it inspected and tested by qualified personnel before use.
6. To ensure that the inverter's internal electronic components remain in good electrical condition, it is recommended that the inverter be energized once every 6 months during storage. If it has not been energized for more than 6 months, have it inspected and tested by qualified personnel before use.

5 Installation

5.1 Installation Requirements

Installation Environment Requirements

1. Do not install the equipment in environments that are flammable, explosive, or corrosive.
2. The mounting structure must be sturdy and reliable and capable of supporting the inverter's weight.
3. The installation space must meet the equipment's ventilation, heat dissipation, and operating clearance requirements.
4. The equipment's ingress protection rating is suitable for indoor and outdoor installation. The temperature and humidity at the installation site must be within the specified range.
5. Install the inverter in a location protected from direct sunlight, rain, and snow accumulation. Installation in a sheltered location is recommended; install a sunshade if necessary.
6. Install the inverter out of children's reach and avoid locations where it can be easily touched. The surface may become hot during operation, posing a burn hazard.
7. Install the equipment at a height that allows easy operation and maintenance. Ensure that the indicator lights and all labels are easy to see, and that the terminals are easy to access.
8. The inverter installation altitude must be below its maximum operating altitude of 4000 m.
9. Inverters installed in salt-affected areas are subject to corrosion. Salt-affected areas are those within 1000 m of the coast or exposed to sea breezes. The areas affected by sea breezes vary depending on weather conditions (such as typhoons and seasonal winds) and terrain (such as the presence of dikes or hills).
10. Keep the equipment away from strong magnetic fields to avoid electromagnetic interference. If a radio station or wireless communication equipment operating below 30 MHz is located near the installation site, install the equipment as follows:
 - Install a ferrite core with multiple turns on the inverter's DC input cables or AC output cables, or install a low-pass EMI filter.
 - Maintain a distance of more than 30 m between the inverter and wireless equipment that may cause electromagnetic interference.

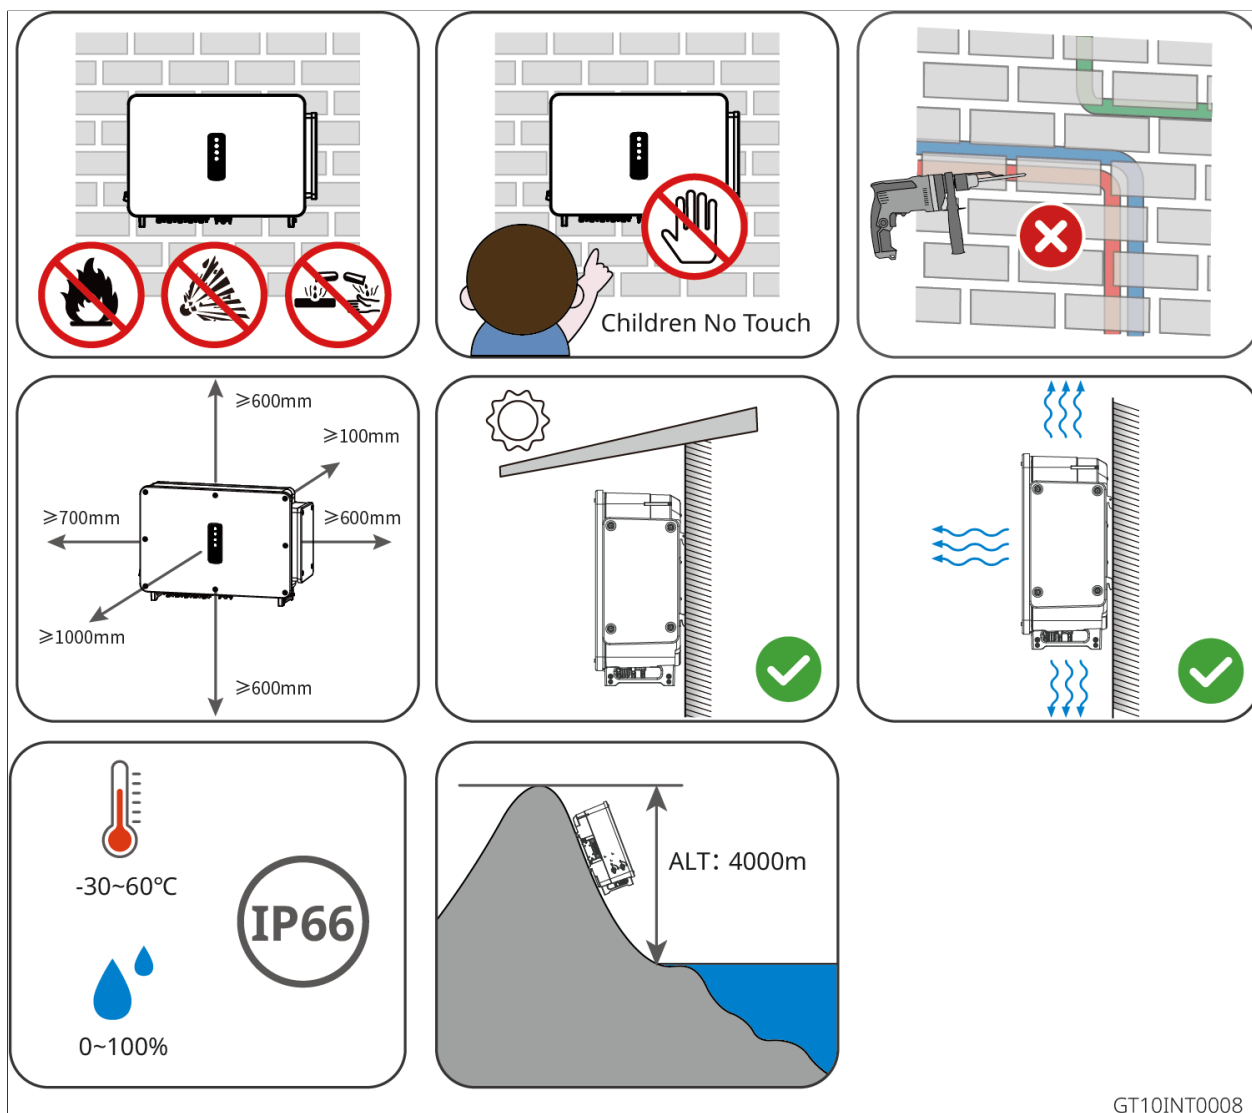

GT10INT0008


Mounting Structure Requirements

- The mounting structure must not be made of flammable materials and must be fire-resistant.
- Ensure that the mounting surface is sturdy and capable of supporting the equipment's weight.
- The equipment vibrates during operation. Do not install it on a structure with poor sound insulation, as operating noise may disturb residents in living areas.

Installation Angle Requirements




- Recommended inverter installation angle: vertical or tilted backward $\leq 15^\circ$.







- Do not install the inverter upside down, tilted forward, tilted backward beyond the specified angle, or horizontally.

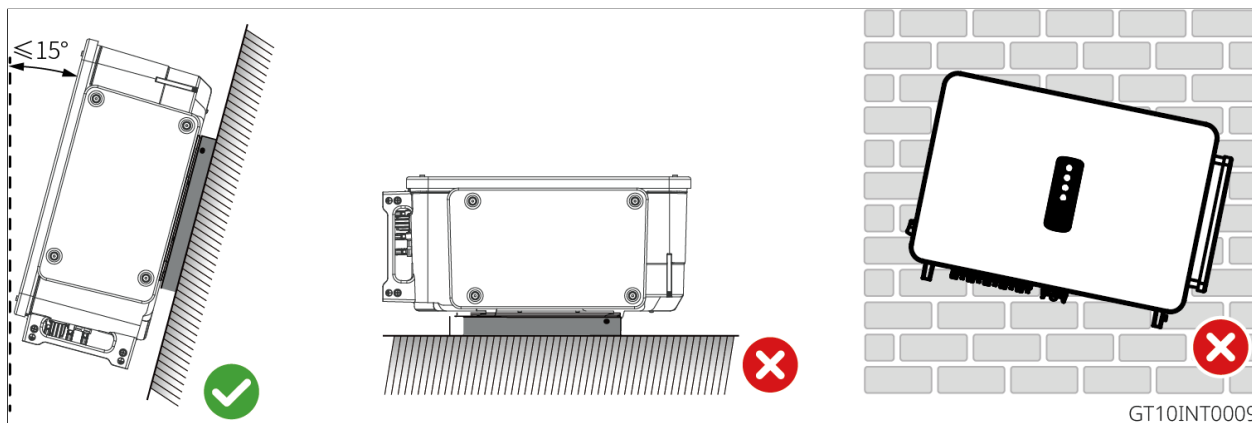

Installation Tool Requirements

   The following installation tools are recommended. Other auxiliary tools may be used on site as needed.

Tool Type	Description	Tool Type	Description
	Insulated gloves, protective gloves		Dust mask
	Safety goggles		Safety shoes
	Torque wrench		Hammer drill
	Diagonal cutters		Heat gun

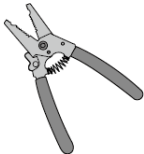     	Wire stripper		Terminal crimping tool
	Rubber mallet		Marker
	Multimeter		Heat-shrink tubing
	Vacuum cleaner		Spirit level
	Socket wrench		Unlocking tool
	Crimping tool		Cable tie

5.2 Installing the Inverter

5.2.1 Moving the Inverter

CAUTION

Before installation, move the inverter to the installation location. To prevent personal injury or equipment damage during handling, observe the following precautions:

1. Assign enough personnel according to the equipment weight to ensure it does not exceed the weight that can be safely handled, which could otherwise cause injury if dropped.
2. Wear safety gloves to prevent injury.
3. Keep the equipment balanced during transport to prevent it from falling.

5.2.2 Installing the Inverter

NOTICE


- When drilling, make sure the drilling locations avoid water pipes, cables, and other objects inside the wall to prevent hazards.
- When drilling, wear safety goggles and a dust mask to prevent dust from entering your respiratory tract or eyes.

Install the mounting bracket


Step 1: Unfold the marking template and position it level against the wall or support. Use a marker to mark the drilling locations.

Step 2: Use a hammer drill with a 13 mm bit to drill the inverter mounting holes to a depth of approximately 65 mm. For the Australian version, use an 8 mm bit to drill the protective cover mounting holes to a depth of approximately 80 mm.

Step 3: Use expansion bolts to secure the mounting bracket to the wall or support.
Wall mounting

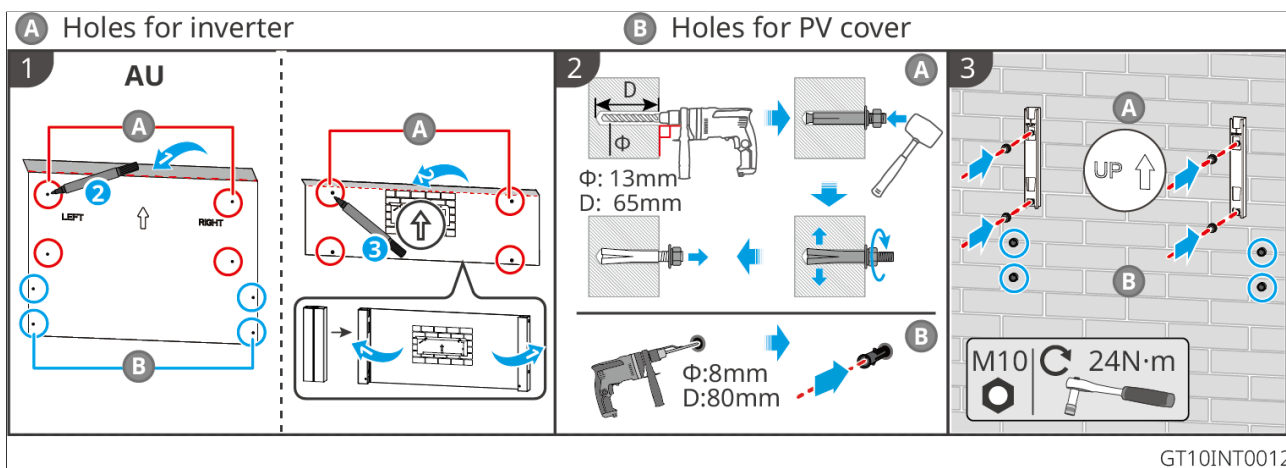

Support mounting

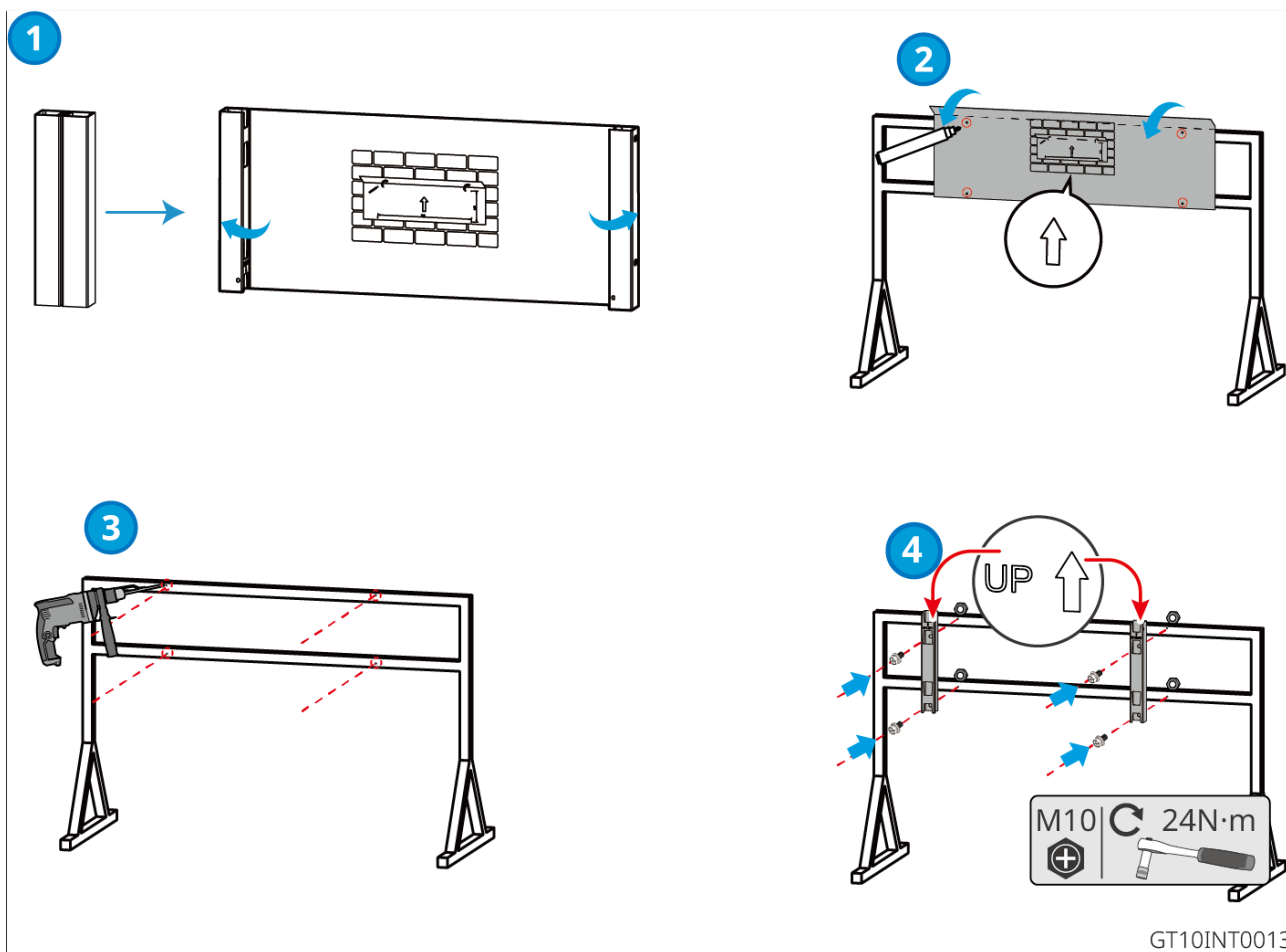


Installing the Inverter

Type 1: With handles

Step 1: Install the handles in the corresponding holes on the inverter and secure

them.


Step 2: Use the handles to carry or hoist the inverter. Hang it on the mounting bracket and secure the bracket to the inverter.

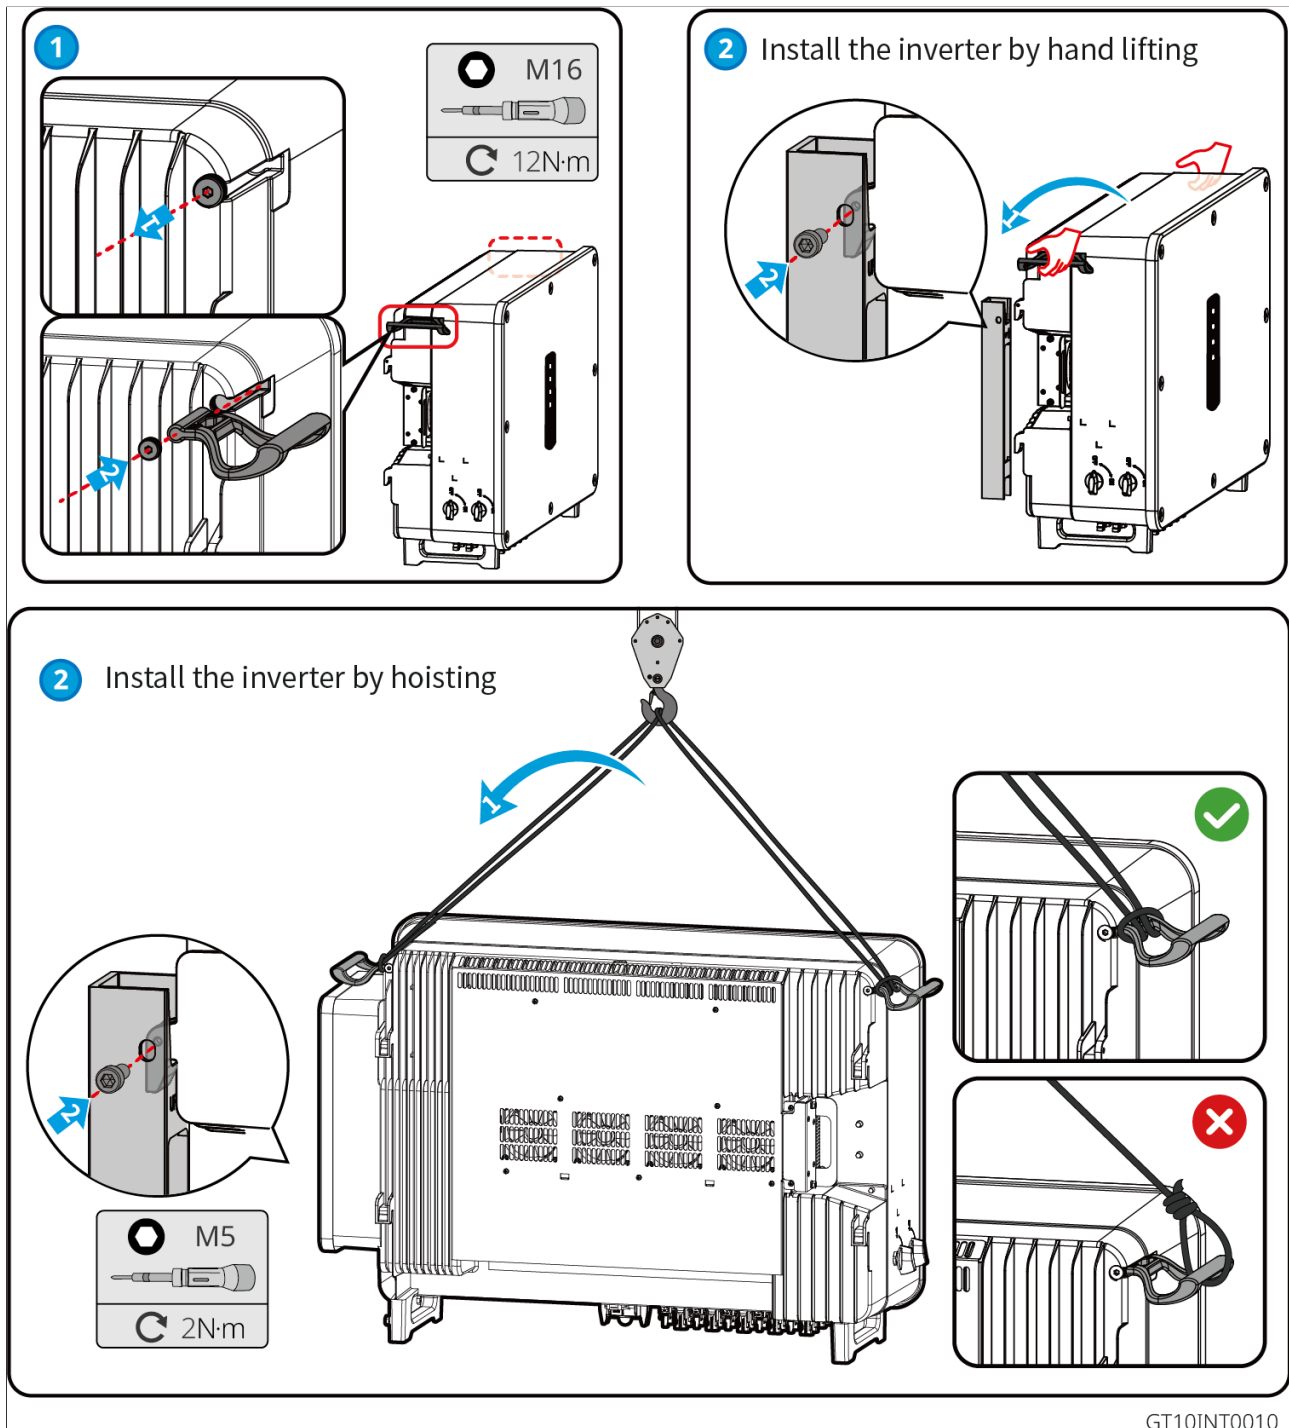

Type 2: Handle-free

Step 1: Place the inverter face up and lift it by all four corners to carry it horizontally.

Step 2: Support the bottom of the inverter, lift it, steady it, and hang it on the rear mounting bracket. Secure the rear mounting bracket to the inverter.

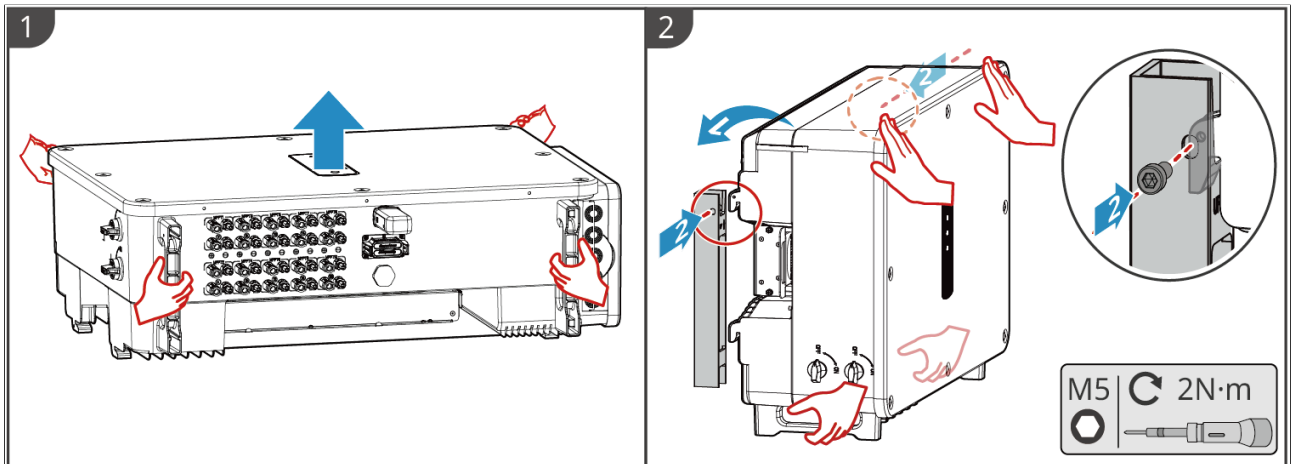


GT10INT0014

Installing the PV Protective Cover (Australia only)

Step 1: Use the correct screws and hinges to assemble the PV protective cover.

Step 2: Secure the PV cover to the wall, ensuring that it is firmly installed.

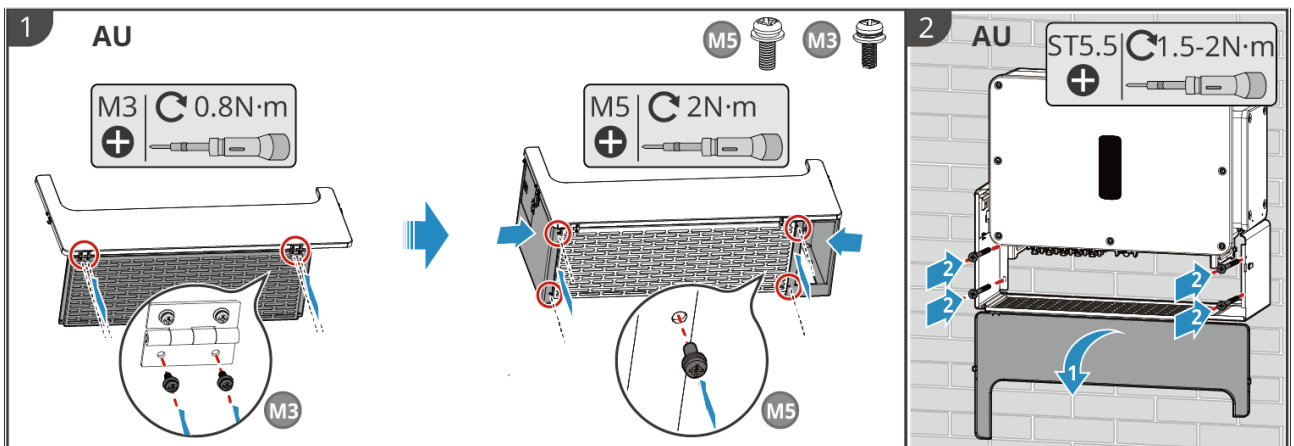

GT10INT0015

6 Electrical Connections

6.1 Safety Precautions

DANGER

- Before making electrical connections, turn off the inverter's DC switch and AC output switch, and make sure the equipment is de-energized. Never perform work on energized equipment, as this may result in electric shock or other hazards.
- All operations performed and the specifications of cables and components used during electrical connection must comply with local laws and regulations.
- Excessive tension on a cable may result in a poor connection. When wiring, leave sufficient cable slack before connecting the cable to the inverter terminal.

NOTICE

- When making electrical connections, wear personal protective equipment as required, including safety shoes, protective gloves, and insulating gloves.
- Only qualified personnel may perform electrical connection work.
- The cable colors in the illustrations in this document are for reference only. Actual cable specifications must comply with local regulations.
- The GW100K-GT, GW110K-GT, and GW125K-GT models differ only in the number of MPPTs and have the same wiring method. This manual uses the GW110K-GT as an example.

Cable Specification Requirements

Cable	Type	Cable Specifications
Protective earth conductor	Outdoor copper-core cable	Cable outer diameter: 11–30 mm Conductor cross-sectional area $S_{PE} \geq S/2^{*1}$

AC cable (multicore)	Multicore outdoor cable	Cable outer diameter: 35–69 mm Copper-core cable conductor cross-sectional area S : 70–240 mm ² Aluminum alloy or copper-clad aluminum cable conductor cross-sectional area S : 95–240 mm ² Protective earth conductor cross-sectional area $S_{PE} \geq S/2^{*1}$
	Single-core outdoor cable	Cable outer diameter: 11–30 mm Copper-core cable conductor cross-sectional area S : 70–240 mm ² Aluminum alloy or copper-clad aluminum cable conductor cross-sectional area S : 95–240 mm ² Protective earth conductor cross-sectional area $S_{PE} \geq S/2^{*1}$
DC cable	PV cable rated for 1100 V	Cable outer diameter: 4–7 mm Conductor cross-sectional area: 2.5–6 mm ²
RS485 communica tion cable	Outdoor shielded twisted-pair cable compliant with local standards	Cable outer diameter: 4.5–6 mm Conductor cross-sectional area: 0.2–0.5 mm ² Total length must not exceed 1,000 m

Note:

*1: S_{PE} refers to the cross-sectional area of the protective earthing conductor, and S refers to the cross-sectional area of the AC cable conductor.

*2: The total length of the communication cable must not exceed 1,000 m.


The values in this table are valid only when the external protective earthing conductor is made of the same metal as the phase conductor. Otherwise, the cross-sectional area of the external protective earthing conductor must provide equivalent conductance to that specified in this table.

6.2 Connecting the Protective Earth Conductor

! WARNING

- The protective earthing of the enclosure does not replace the protective earth conductor at the AC output port. When wiring, ensure that the protective earth conductors at both locations are securely connected.
- If multiple inverters are installed, ensure that the protective earthing points on all inverter enclosures are equipotentially bonded.
- To improve the corrosion resistance of the terminal, after completing the protective earth conductor connection, apply silicone sealant or paint to the outside of the grounding terminal for protection.
- Prepare the protective earth conductor and terminals according to the recommended specifications.

Grounding conductors of other sizes that comply with local standards and safety regulations may also be used for the grounding connection. However, the equipment manufacturer is not liable for any damage resulting from this.

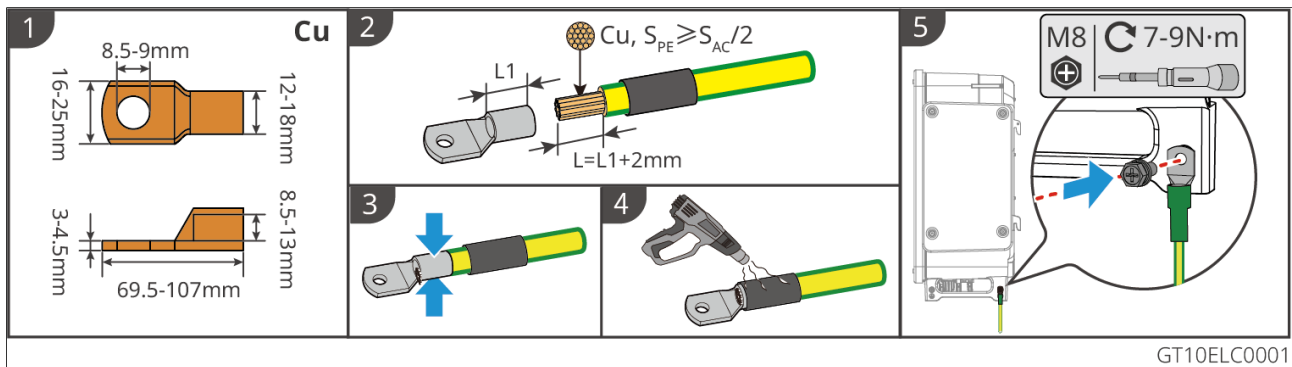

6.3 Connecting the AC Output Cables

WARNING

- Do not connect a load between the inverter and the AC switch directly connected to the inverter.
- The inverter has an integrated residual current monitoring unit (RCMU). If the inverter detects leakage current exceeding the permitted value, it will quickly disconnect from the grid.

Determine whether to install an RCD (residual current device) in accordance with local laws and regulations. An external Type A RCD can be connected to the inverter to provide protection when the DC component of the leakage current exceeds the limit. The following RCD specifications are for reference:

Inverter model	RCD specifications
GW75K-GT-LV-G10	$\geq 750\text{mA}$
GW100K-GT	$\geq 1000\text{mA}$
GW110K-GT	$\geq 1100\text{mA}$
GW125K-GT	$\geq 1250\text{mA}$

NOTICE

Each inverter must be equipped with an AC output switch. Multiple inverters must not be connected to the same AC switch.


To ensure that the inverter can be safely disconnected from the grid in the event of an abnormal condition, install an AC switch on the AC side of the inverter. Select a suitable AC switch in accordance with local regulations. The following switch specifications are for reference:

Inverter model	AC switch specifications
GW100K-GT	200A
GW110K-GT	225A

GW75K-GT-LV-G10、GW125K-GT	250A
---------------------------	------

WARNING

- When wiring, match the AC output cable conductors exactly to the "L1," "L2," "L3," "N," and "PE" terminals on the AC terminal block. Incorrect cable connections will damage the inverter.
- Ensure that the conductor cores are fully inserted into the wiring holes of the AC terminal block, with no exposed conductor.
- Ensure that the cables are securely connected; otherwise, the wiring terminals may overheat during operation and damage the inverter.
- The AC output terminals support three-phase, four-wire and three-phase, five-wire connection configurations. The applicable configuration depends on the actual wiring scenario. This document uses the three-phase, five-wire configuration as an example.
- Leave sufficient slack in the protective earth conductor to ensure that it is the last conductor to bear the load if the AC output cable is subjected to tension due to force majeure.
- The waterproof rubber grommet for the AC cable outlet is supplied with the inverter and is located in the inverter AC connection box. Select the corresponding grommet opening according to the cable specifications actually used.
- Provide your own OT terminals for the AC connections.
- When using aluminum conductors, connect copper-to-aluminum transition terminals.

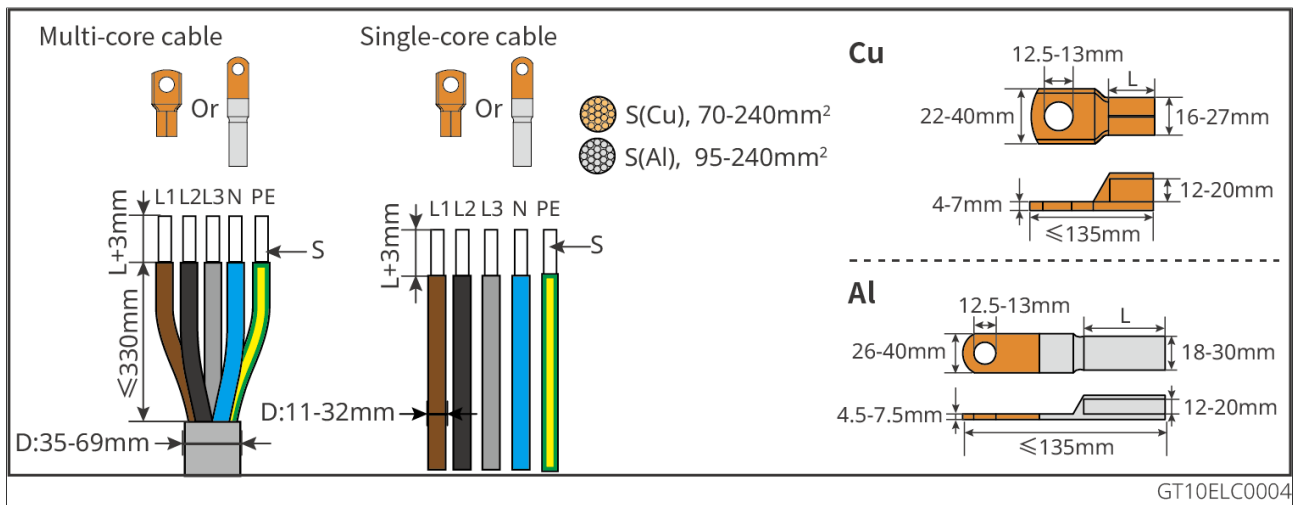

NOTICE


- After completing the wiring, check that all connections are correct and secure, and remove any installation debris from the AC connection box.
- The AC output terminals must be sealed to ensure the equipment maintains its degree of protection.
- Single-core and multicore cables can be connected to the inverter's AC side. This manual uses single-core cables as the wiring example.

Step 1: Select the appropriate hole size according to the AC cable diameter. Cut a rubber gasket or plastic conical sleeve to the required size, then pass the cable through it.

Step 2: Remove the AC wiring cover.

Step 3: Crimp an OT terminal onto the AC cable to prepare the AC output cable. Secure the AC output cable to the inverter.

Step 4: Secure the AC wiring cover.

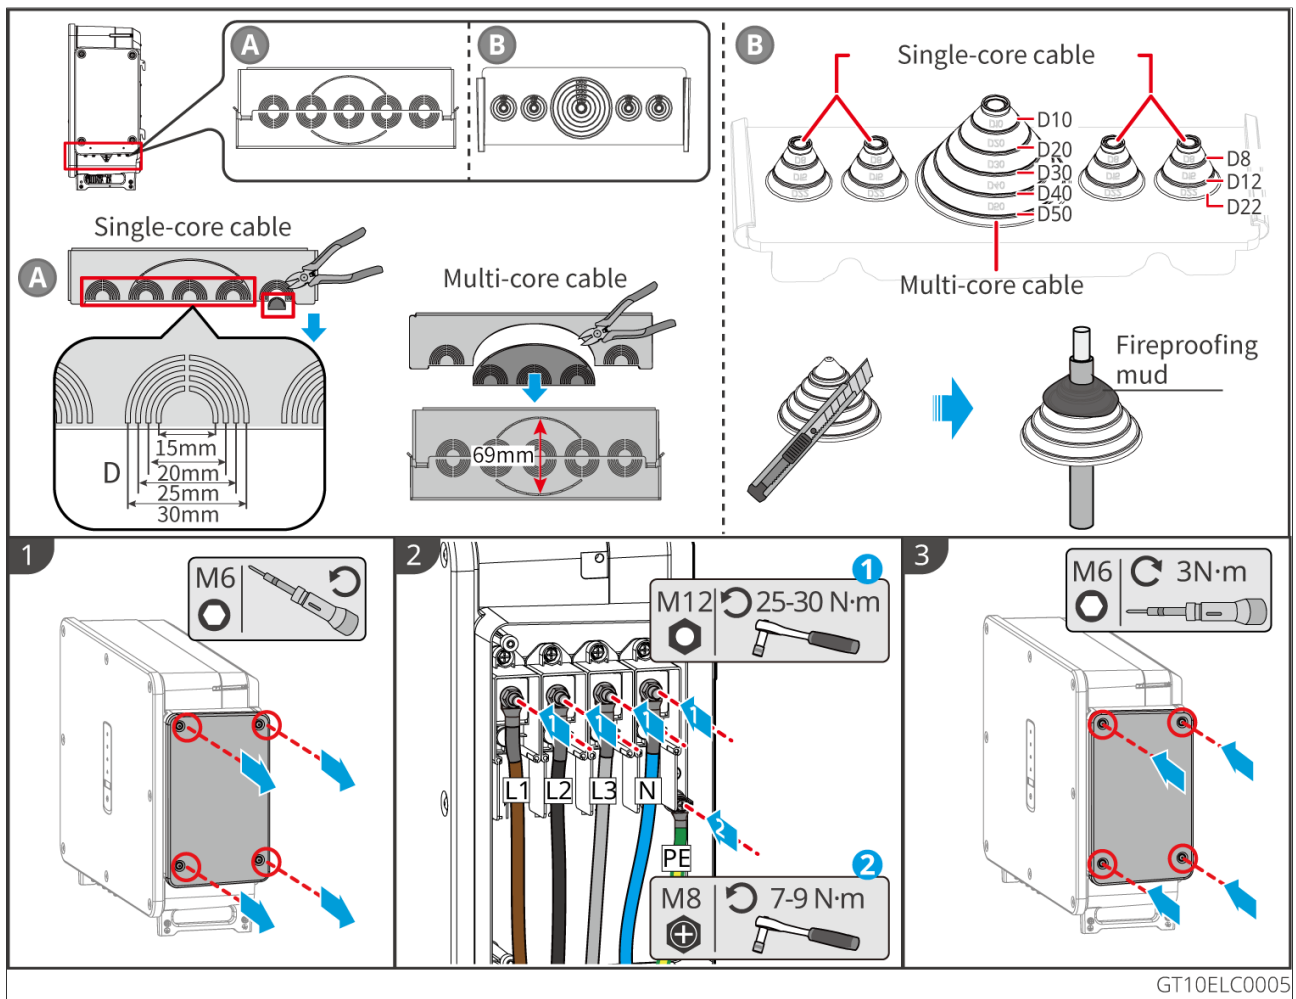

GT10ELC0005

6.4 Connecting the DC Input Cables

 DANGER

1. Do not connect the same PV string to multiple inverters, as this may damage the inverters.
2. PV strings do not support grounding. Before connecting PV strings to the inverter, ensure that their minimum insulation resistance to ground meets the minimum insulation resistance requirement.
3. Use the DC connectors supplied with the inverter to connect the inverter's DC cables.
4. Before connecting PV strings to the inverter, verify the following. Failure to do so may cause permanent damage to the inverter and, in severe cases, fire resulting in personal injury or property damage. Damage or injury caused by failure to follow this document or the applicable user manual is not covered by the warranty.
 - Ensure that the positive terminal of each PV string is connected to the inverter's PV+ terminal and the negative terminal to the PV- terminal.
 - For the GW100K-GT, GW110K-GT, and GW125K-GT, ensure that the open-circuit voltage of the PV strings connected to each MPPT does not exceed 1100 V. When the input voltage is between 1000 V and 1100 V, the inverter enters standby mode. When the voltage returns to 180–1000 V, the inverter resumes normal operation.
 - For the GW75K-GT-LV-G10, ensure that the open-circuit voltage of the PV strings connected to each MPPT does not exceed 800 V.

! WARNING

- PV strings connected to the same MPPT must use PV modules of the same model and quantity.
- To maximize inverter power generation efficiency, ensure that the maximum power point voltage of the PV modules connected in series is within the inverter's MPPT full-load voltage range.
- Ensure that the voltage difference between different MPPTs is less than or equal to 150 V.
Ensure that the input current of each MPPT is less than or equal to the inverter's maximum input current per MPPT. See Technical Data.
- When connecting multiple PV strings to the inverter's DC inputs, maximize the number of MPPTs used.

DC Terminal Connection Method

- : Connect one PV string
- : Connect two PV strings

Num ber of PV strin gs	MPP T1	MPP T2	MPPT 3	MPP T4	MPPT 5	MPPT 6	MPPT 7	MPPT 8	MPPT 9	MPPT 10
8-9	•	•	•	•	•	•	•	•	•	
10-11	••	•	•	•	•	•	•	•	•	•
12-13	••	•	••	•	••	•	•	•	•	•
14-15	••	•	••	•	••	•	••	•	••	•
16-17	••	••	••	••	••	•	••	•	••	•
18-19	••	••	••	••	••	••	••	••	••	•

Connecting the DC Input Cables

Step 1: Prepare the DC cables.


Step 2: Crimp the DC input terminals.

Step 3: Tighten the DC connector.


Step 4: Measure the DC input voltage.

Step 5: Connect the DC connectors to the inverter's DC terminals.

Type 1:

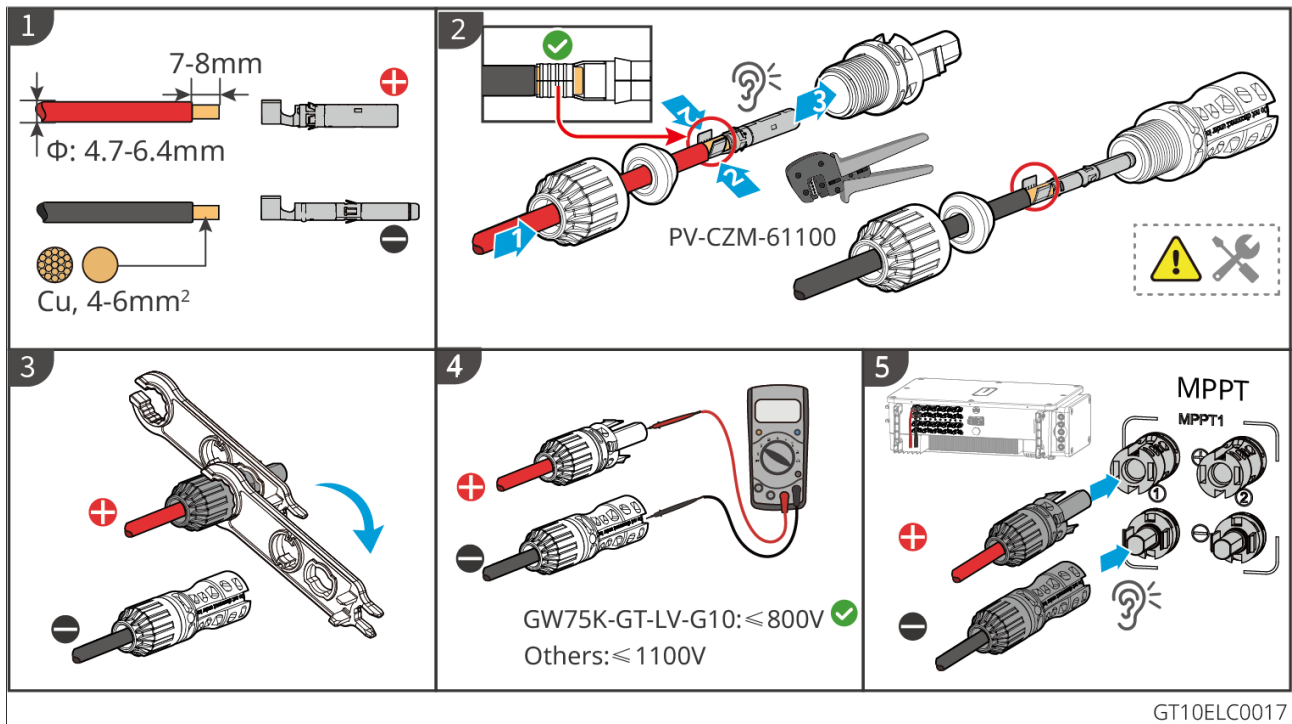

Type II:

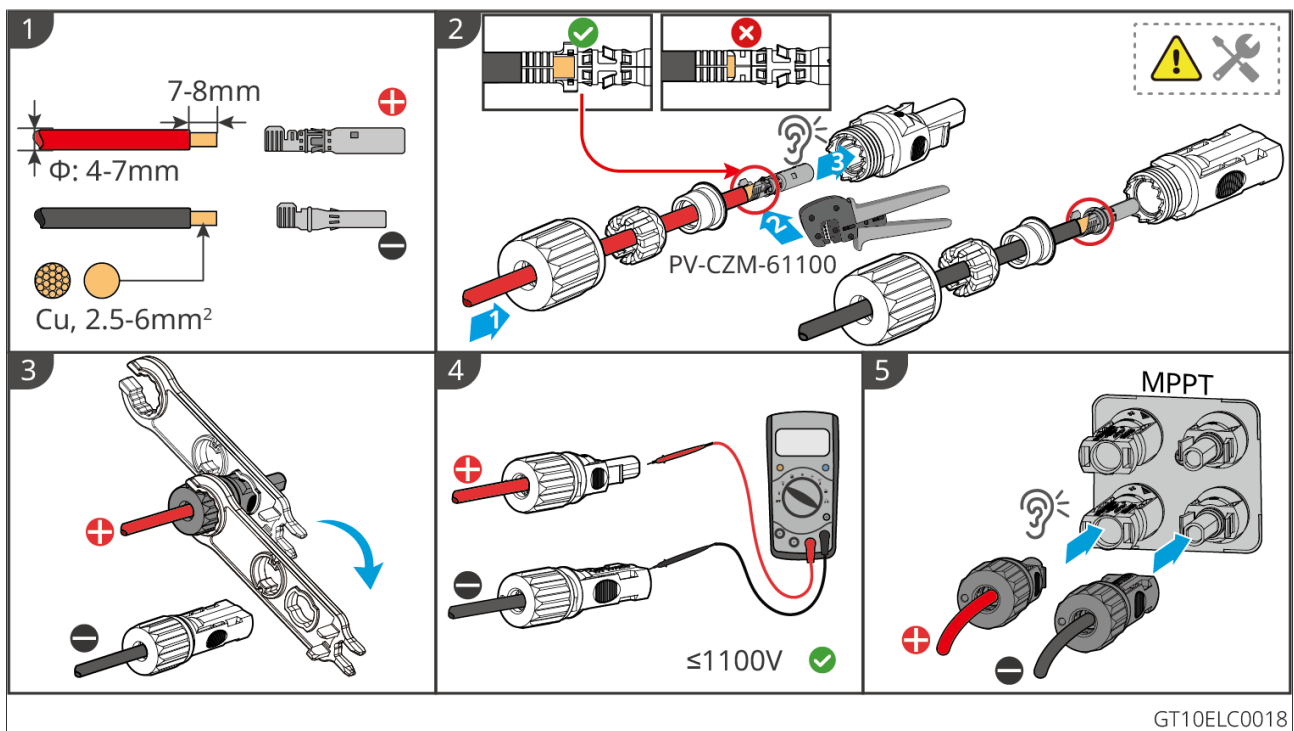


6.5 Communication Connections

6.5.1 RS485 Communication Network Topology

NOTICE

- When multiple inverters are connected to a data logger in an RS485 network, up to 20 inverters can be connected to each COM port on the data logger. The total length of the RS485 cables on each COM port must not exceed 1000 m.
- Where possible, use shielded communication cables and ground the shield when wiring.
- The 4G SIM card supplied with the communication stick includes 5 GB of data and supports parallel operation of up to 4 inverters. To expand the number of inverters operating in parallel to 10, we recommend upgrading the 4G SIM card yourself. Allow an additional 1.2 GB of data per year for each additional inverter.
- When multiple inverters operate in parallel, configure them as follows according to the parallel operation plan to ensure reliable communication:
 Smart Data Logger / Smart Energy Control Cabinet: Insert the terminating resistor into the communication port of the last inverter.
 Ezlink3000 / 4G: Install a terminating resistor at the communication port of both the first and last inverter.

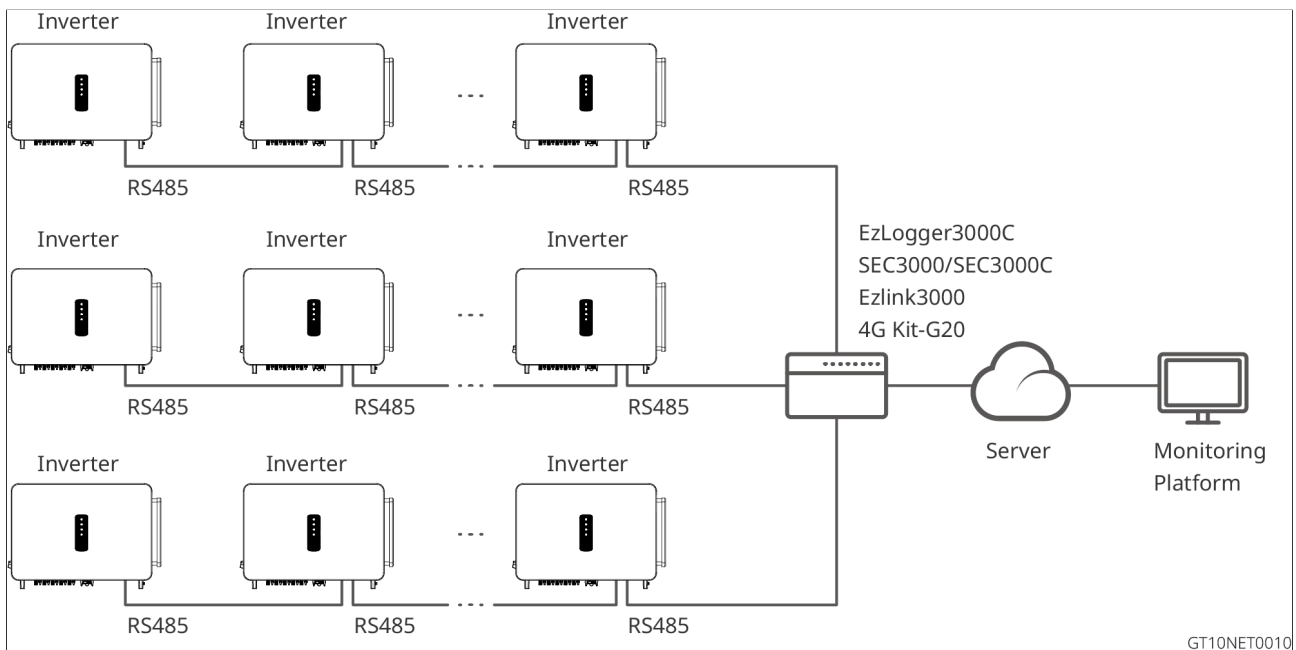

6.5.2 Grid Feed-in Power Limitation

When the loads in a PV system cannot consume all the power generated by the

system, the surplus power is fed into the grid. A smart meter and data logger can be used to monitor the system's power generation and control the amount of power fed into the grid.

 WARNING


1. Install the CT close to the point of interconnection and ensure it is oriented correctly. The "-->" marking on the CT indicates the direction of current flow from the inverter to the grid. If installed in the reverse direction, the inverter will trigger an alarm and the export limitation function will not work.
2. The CT aperture must be larger than the outside diameter of the AC power cable to allow the cable to pass through the CT.
3. For details on CT wiring, refer to the relevant manufacturer's documentation and ensure that the wiring direction is correct for proper operation.
4. Clamp the CT around the L1, L2, and L3 cables. Do not clamp it around the N cable.
5. CT Specifications:
 - Select a CT current ratio of $nA/5A$. (nA : CT primary-side input current; n ranges from 200 to 5000 and should be selected by the user according to actual requirements. $5A$: CT secondary-side output current.)
 - A CT accuracy class of 0.5, 0.5s, 0.2, or 0.2s is recommended to ensure that the CT current measurement error is $\leq 1\%$.
6. To ensure CT current measurement accuracy, the CT cable length should not exceed 30 m. A cable ampacity of 6 A is recommended.

NOTICE


1. Ensure that the meter wiring and phase sequence are correct. The recommended cross-sectional area for the meter voltage input cable is 1 mm² (18 AWG).
2. Applicable to GM330 only:
 - The external CT ratio can be configured using the SolarGo App. For example, if a 200 A/5 A CT is used, set the CT ratio to 40.
 - For a three-phase, three-wire networking configuration, short-circuit the N and L2 terminals on the meter side.
 - For detailed configuration instructions, refer to the SolarGo App User Manual



Single-Inverter Power Limitation Networking Solution (GM330)

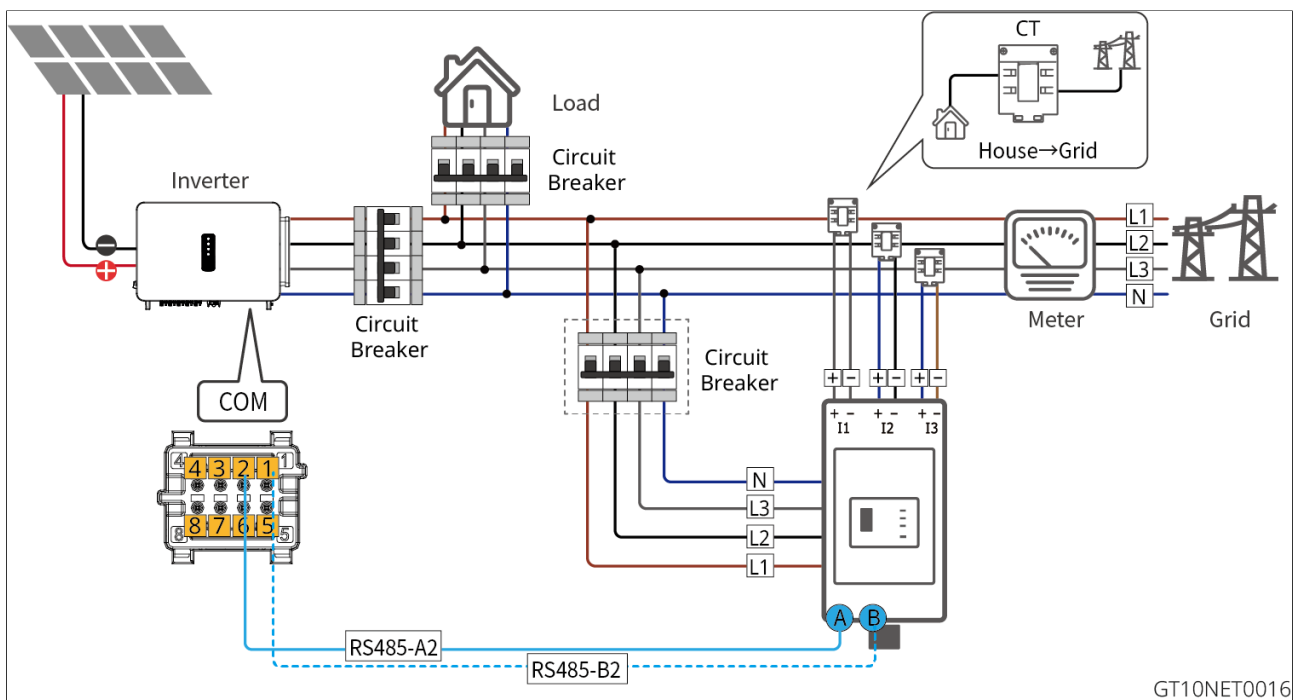


Multi-Inverter Power Limitation Networking Solution (EzLogger3000C+GM330)

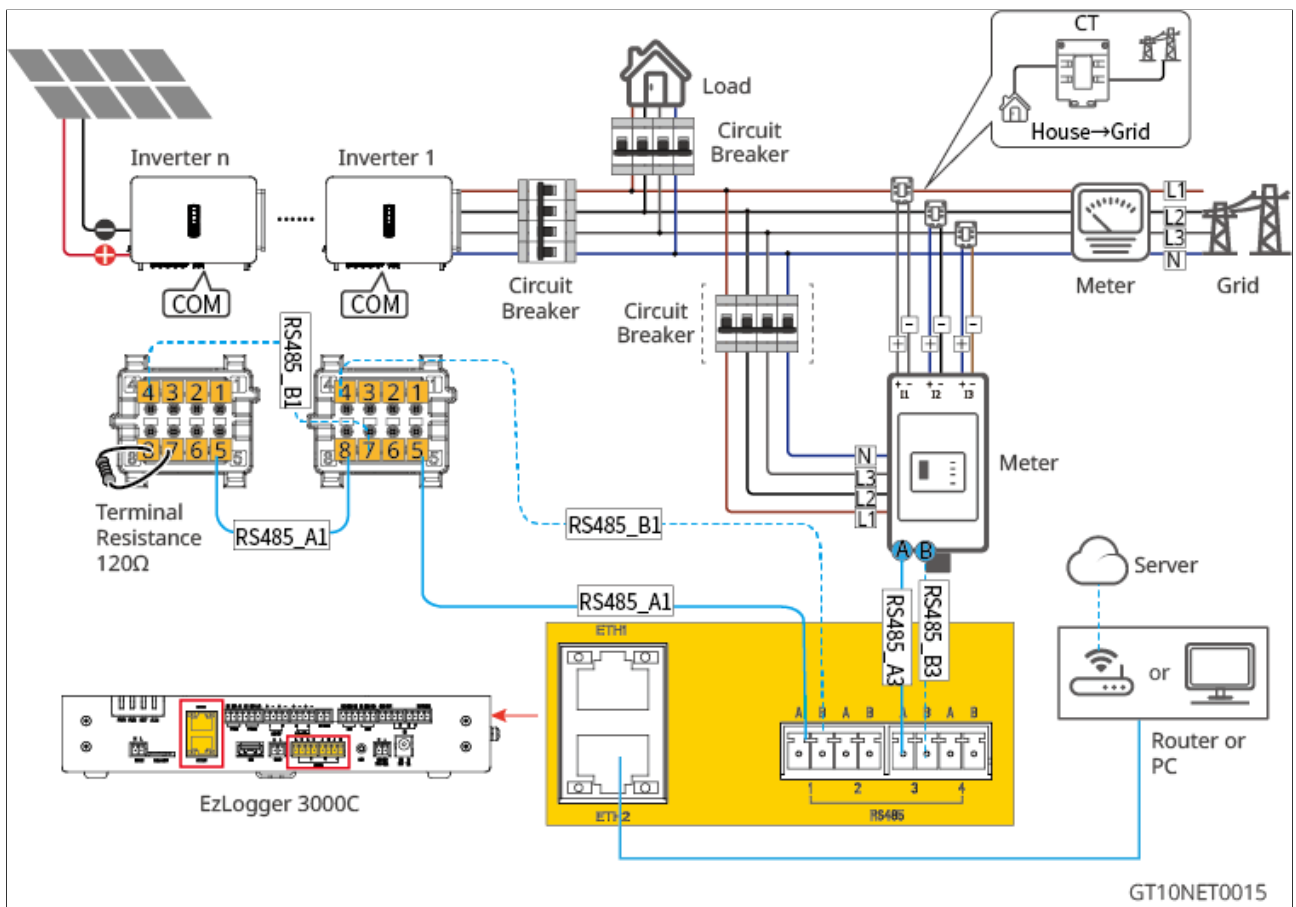


After completing the wiring, configure the relevant parameters using the SolarGo app, the LCD, or the embedded web interface of the EzLogger3000C.


Multi-Inverter Power Limitation Networking Solution (SEC3000/SEC3000C)

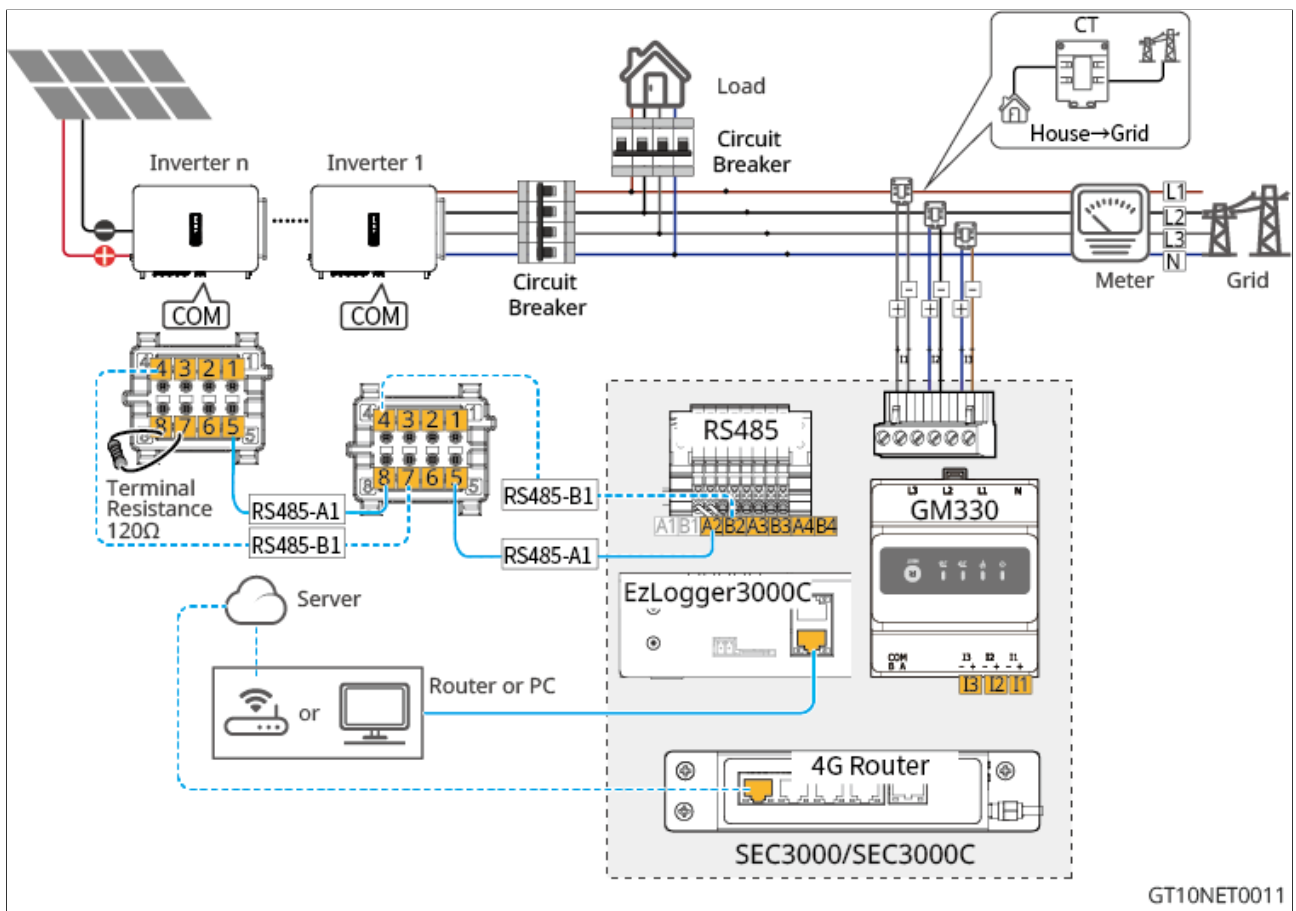

Multi-Inverter Power Limitation Networking Solution (Ezlink3000)

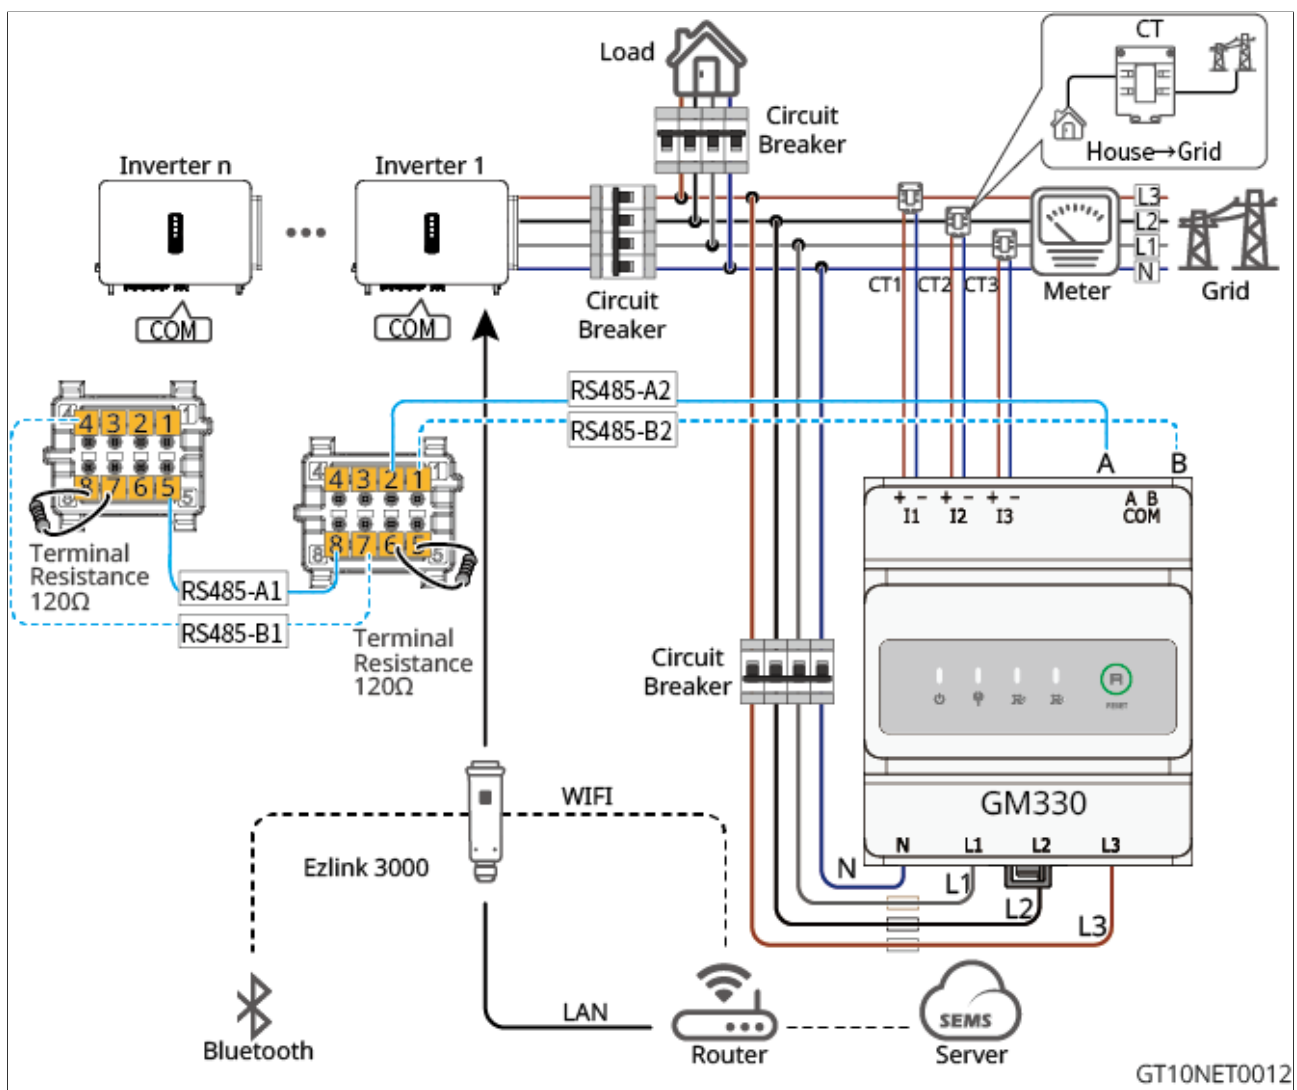


Multi-Inverter Power Limitation Network Configuration (4G Kit-G20)

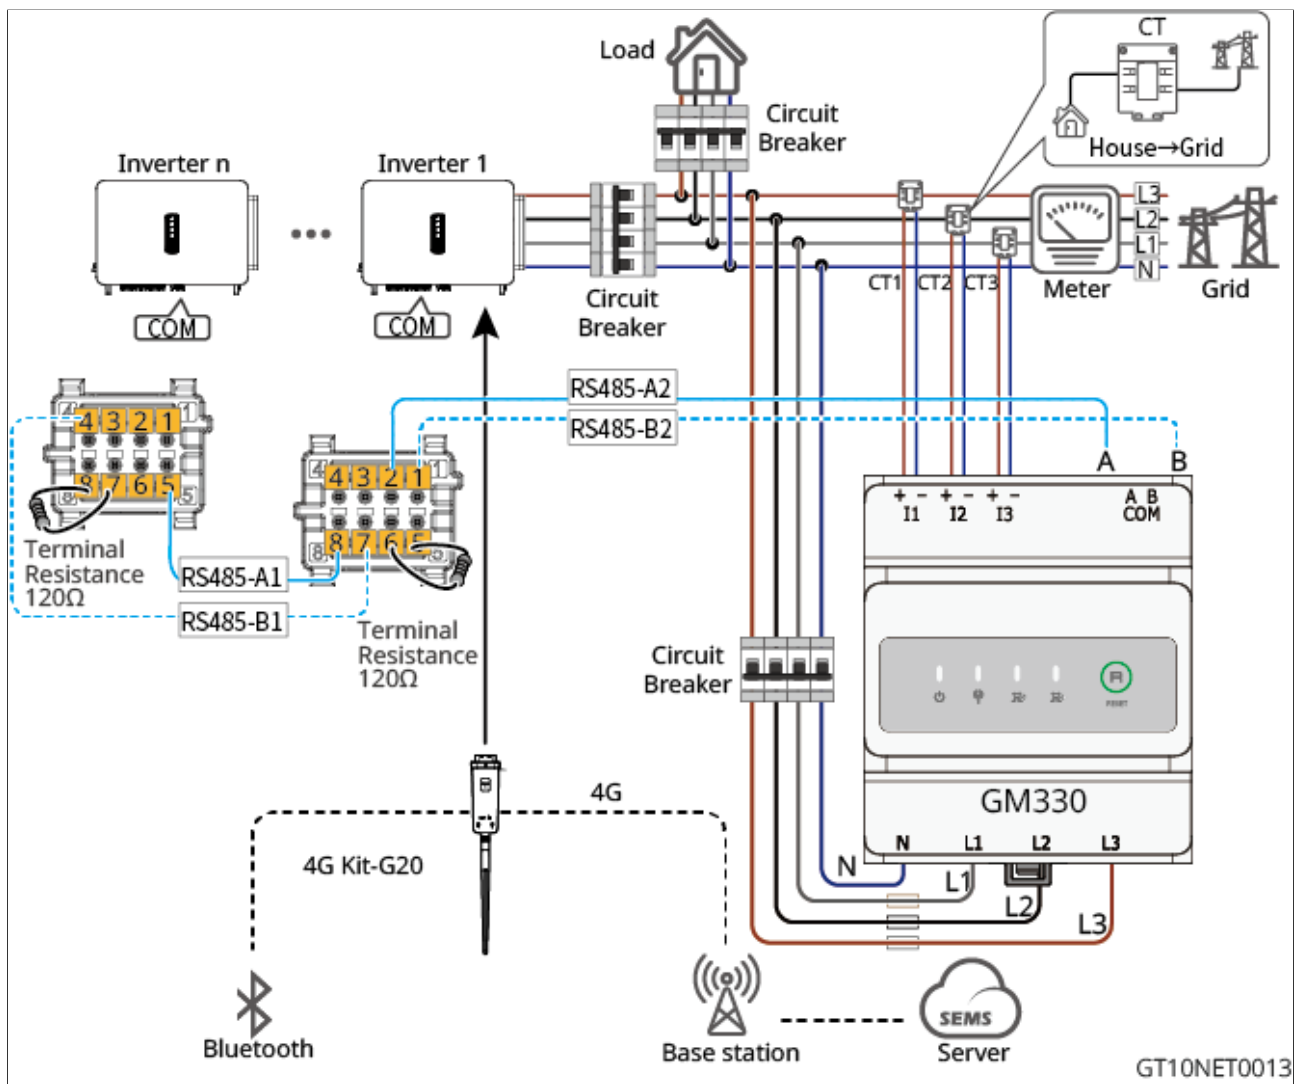

6.5.3 Connecting Communication Cables

NOTICE


- The integrated communication ports of the inverter can be configured differently to meet the regulatory requirements of different regions.
- Remote shutdown and EPO are disabled by default. To use these functions, enable them via the SolarGo app. For details, refer to the SolarGo App User Manual.
- When connecting communication cables, ensure that the terminal definitions exactly match those of the device. Route cables away from sources of interference, such as power cables, to avoid affecting signal reception.
- The communication connector has three cable entry holes, each fitted with a plug. Remove the required number of plugs. Any unused cable entry holes must remain plugged to avoid compromising the inverter's ingress protection.
- When multiple inverters operate in parallel, configure them as follows according to the parallel operation plan to ensure reliable communication:
Smart Data Logger / Smart Energy Control Cabinet: Insert the terminating resistor into the communication port of the last inverter.
Ezlink3000 / 4G: Install a terminating resistor at the communication port of both the first and last inverter.
- The communication ports for different regions are shown below.

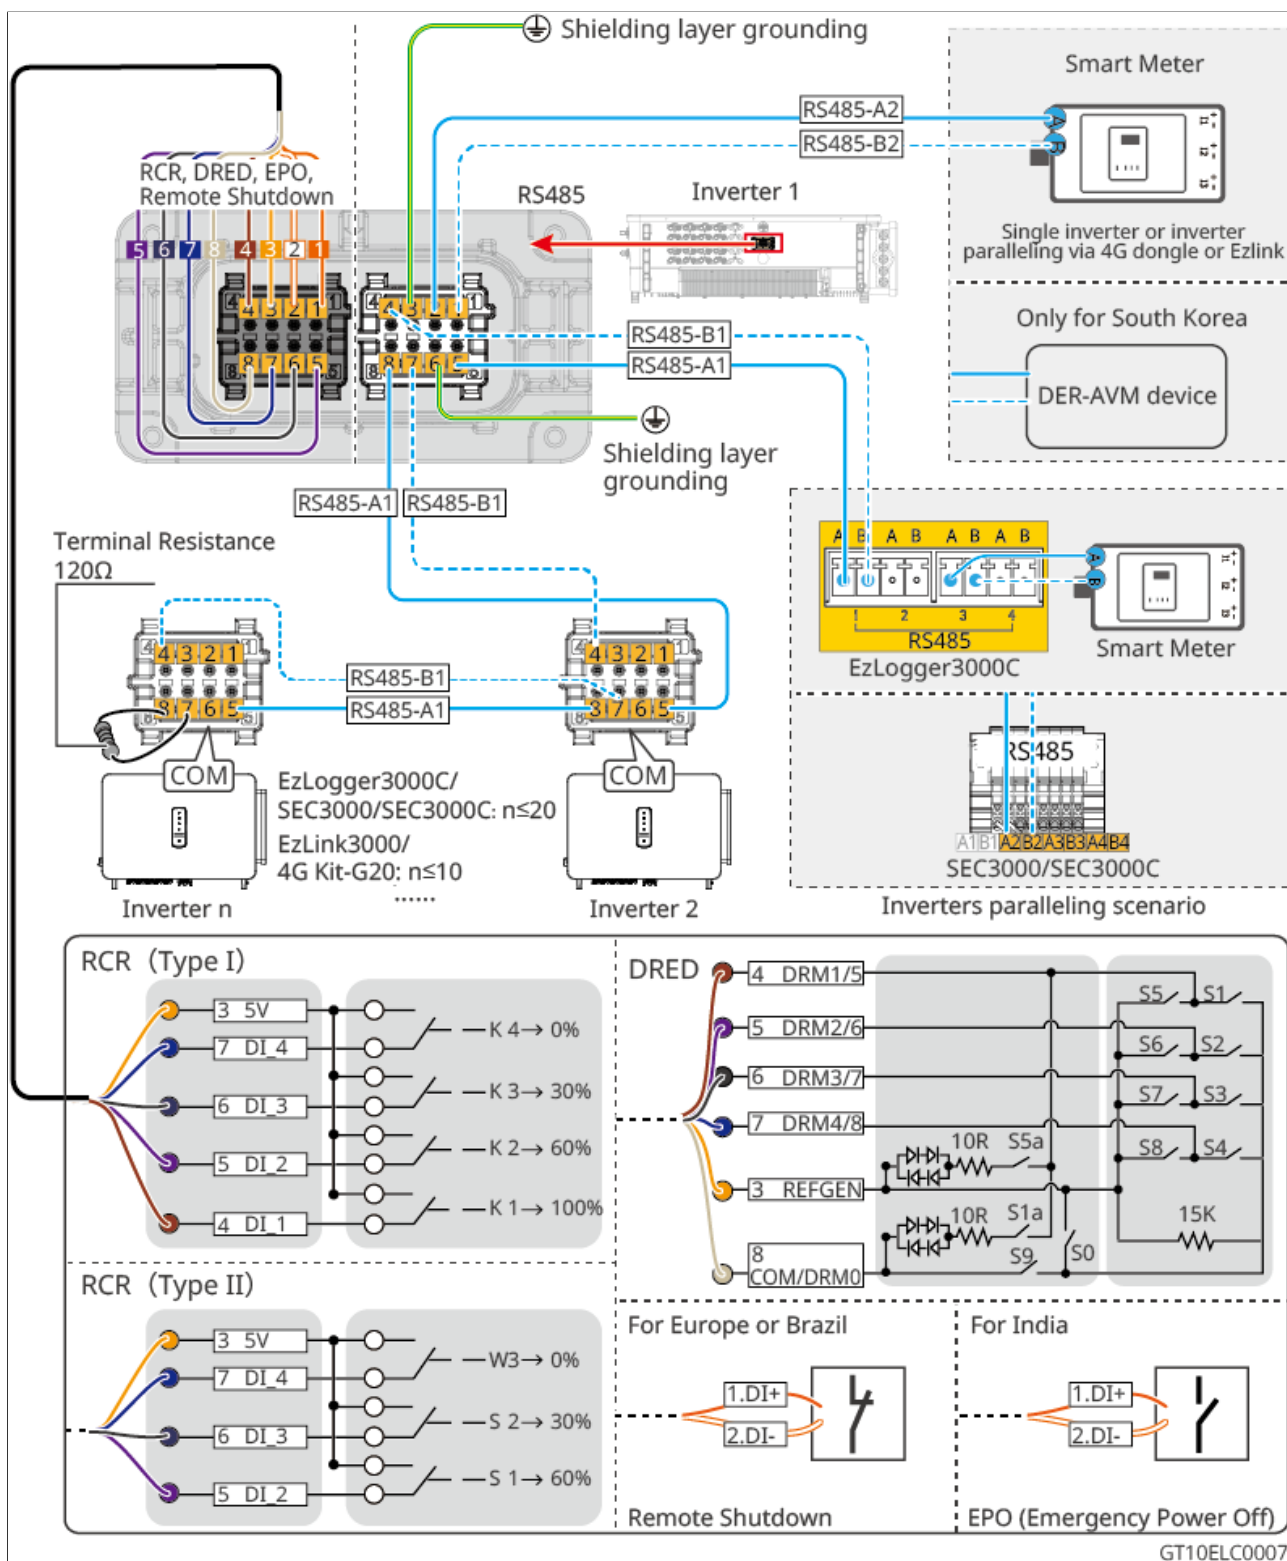

Function	No.	Port Name	Description
----------	-----	-----------	-------------

RS485	1	RS485-B2	For connecting a smart meter.
	2	RS485-A2	
	3	Ground	For connecting multiple inverters, a data logger, or a terminal resistor.
	4	RS485-B1	
	5	RS485-A1	
	6	Ground	
	7	RS485-B1	
	8	RS485-A1	
Remote Shutdown & Emergency Shutdown	1	DI+	Connects to a remote shutdown device (European models only) or an emergency shutdown device (India only).
	2	DI-	
RCR	3	5V	Connects to an RCR device (Europe only).
	4	DI_1(K1)	
	5	DI_2(K2)	
	6	DI_3(K3)	
	7	DI_4(K4)	
DRED	3	REFGEN	Connects to a DRED device (Australia only).
	4	DRM1/5	
	5	DRM2/6	
	6	DRM3/7	
	7	DRM4/8	
	8	COM/DRM0	

Communication Wiring

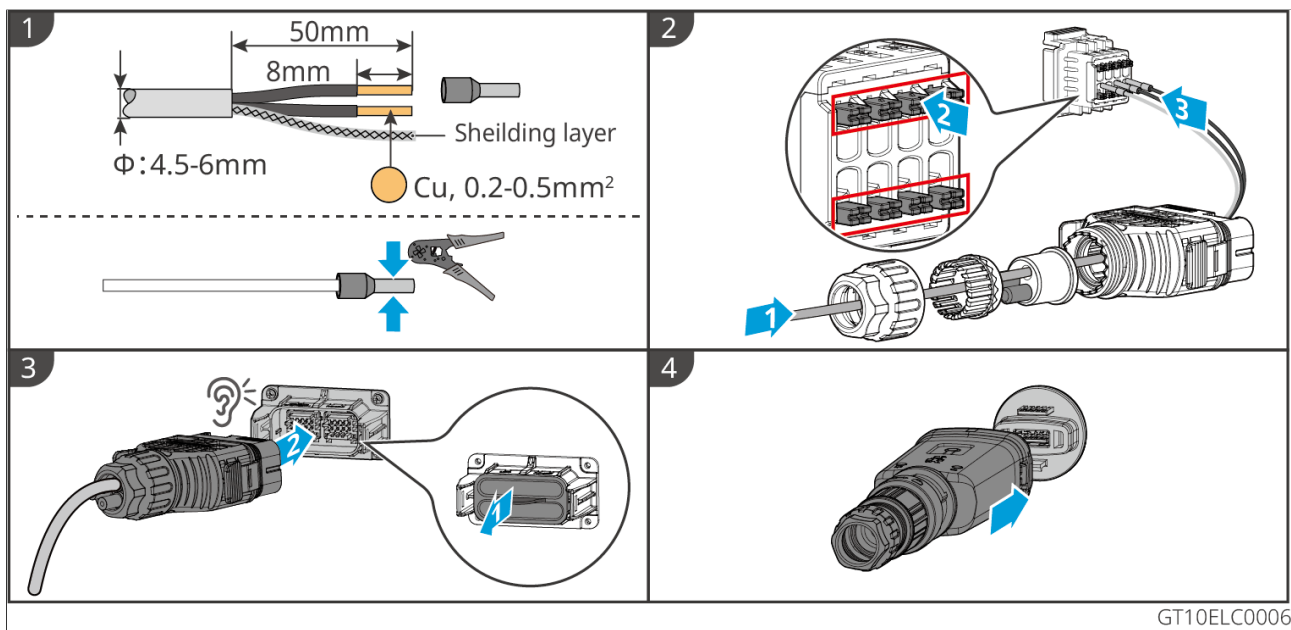


6.5.4 Installing the Communication Module

The inverter supports connecting to a mobile phone or WEB interface via communication modules such as 4G, Wi-Fi, Bluetooth, or Wi-Fi+LAN, allowing you to configure device parameters, view equipment operating information and error messages, and stay informed of system status.

NOTICE

For details on the communication module, refer to the documentation supplied with the corresponding module. For more detailed information, visit the official website.

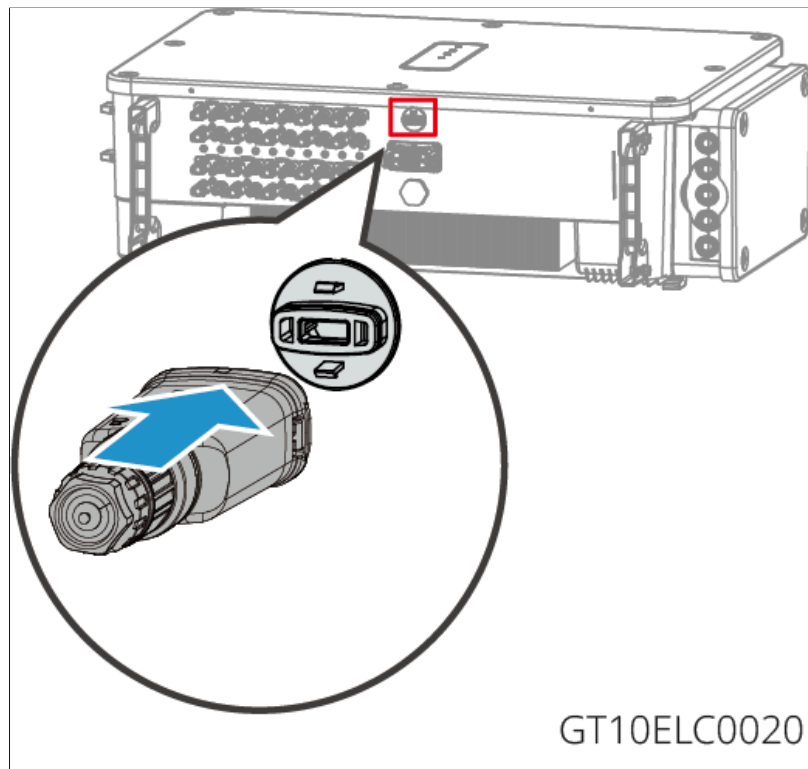


6.5.5 Post-Wiring Procedures (Australia Only)

NOTICE

For installations in the Australian market, after installing the PV protective cover, it is recommended that the AC cable be routed through the AC wiring channel.

Step 1: Close the PV protective cover.

Step 2: Make sure the screws are securely installed, then fasten the safety pin.

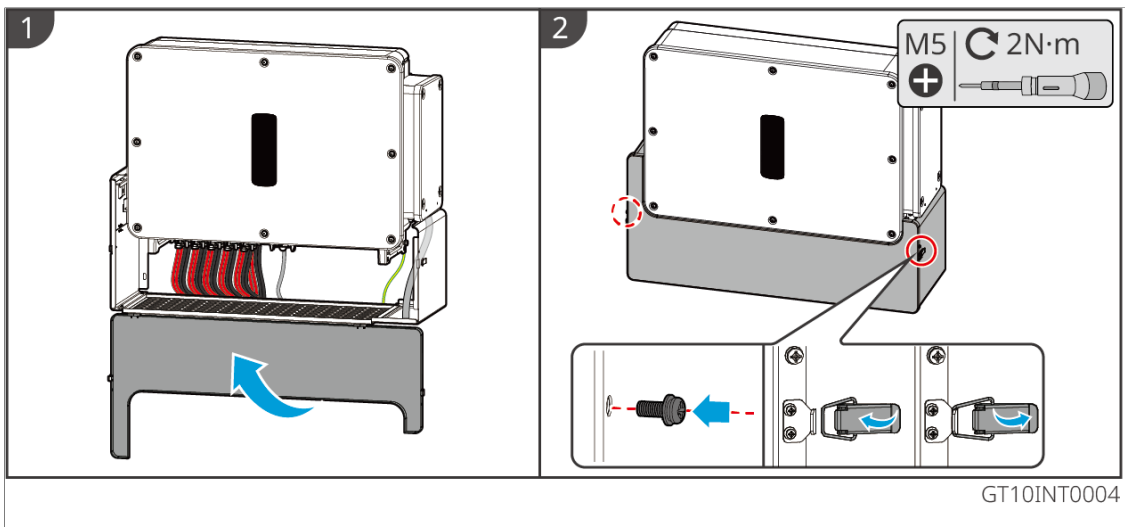

7 Equipment Commissioning


7.1 Pre-Energization Inspection

No.	Inspection Item
1	The inverter is securely installed, its location allows for easy operation and maintenance, the installation clearance allows for ventilation and heat dissipation, and the installation environment is clean and tidy.
2	The protective earth, DC input, AC output, and communication cables are connected correctly and securely.
3	Cables are secured and routed as required, are arranged properly, and are undamaged.
4	Unused ports are sealed.
5	The voltage and frequency at the inverter grid connection point meet grid-connection requirements.

7.2 Energizing the Equipment





Step 1:Close the AC switch between the inverter and the grid.

Step 2:Close the inverter's DC switch.

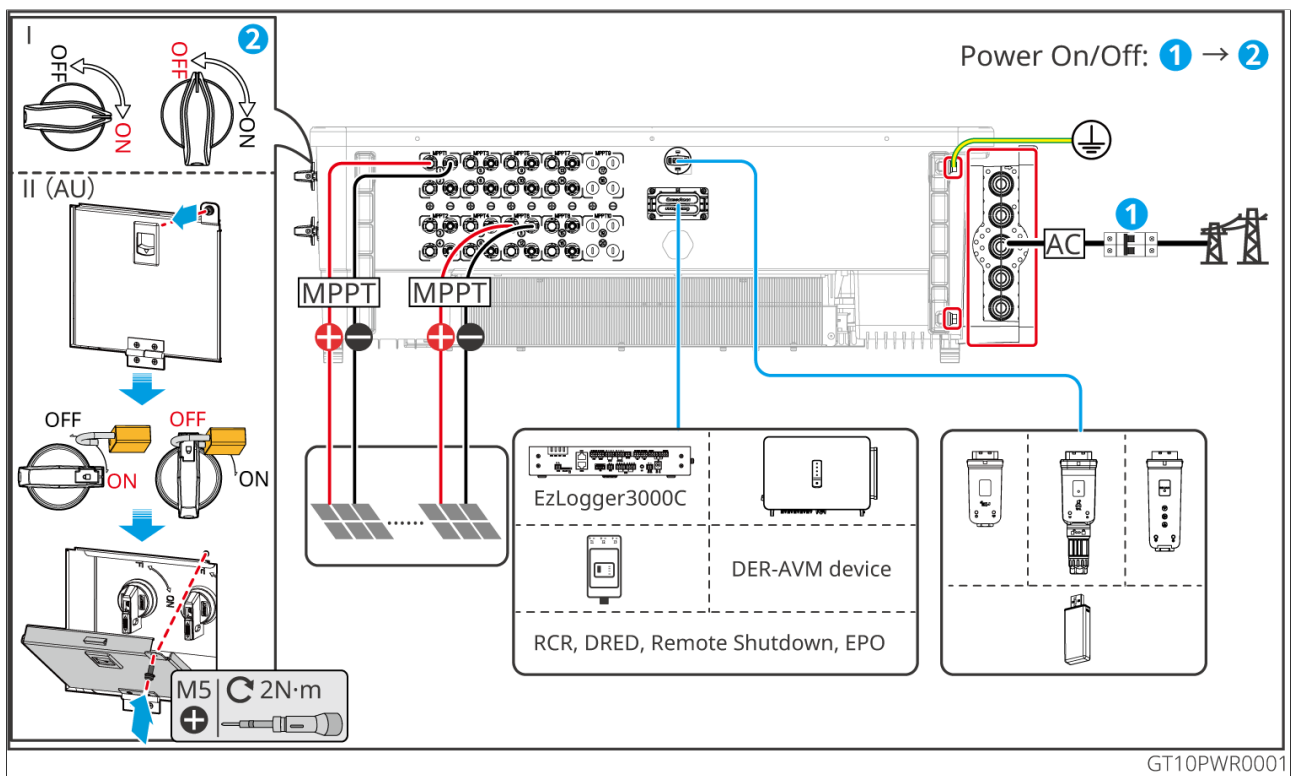

8 System Commissioning

    8.1 LED Indicators and Buttons

Indicator	Status	Description
 电源 Power		Steady on: The device is powered on
		Off: The device is not powered on
 运行 Operation		Steady on: The grid is normal and grid connection is successful
		Off: Not connected to the grid
		One slow flash: Pre-grid-connection self-check
		One quick flash: About to connect to the grid
 Communi cation		Steady on: Wireless monitoring is operating normally
		One flash: Wireless module reset or reboot
		Two flashes: Not connected to a base station or router
		Four flashes: Not connected to the monitoring server
		Flashing: RS485 communication is operating normally
		Off: The wireless module is restoring its factory settings
 故障 Fault		Steady on: System fault
		Off: No fault

8.2 Set the Inverter Parameters via the Display.


NOTICE


- The interface images in this manual correspond to inverter software version V1.01.01. They are for reference only; the actual interface may vary.
- Parameter names, ranges, and default values may be changed or adjusted in the future. Refer to the actual display.
- Inverter power parameters must be set by qualified personnel to avoid incorrect settings affecting the inverter's energy yield.

Display Button Instructions

- In any menu level, if no button is pressed for a certain period, the LCD will dim and the display will automatically return to the initial screen.
- Short-press the display button: switch menu screens or adjust parameter values.
- Long-press the display button: after adjusting the parameter value, long-press to confirm the setting and enter the next submenu level.


Button Operation Example

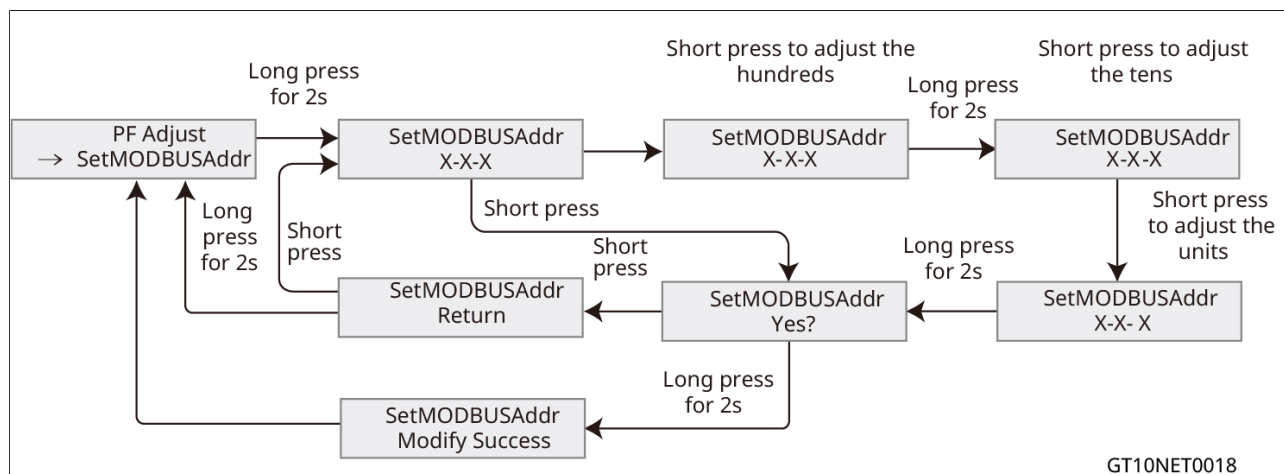

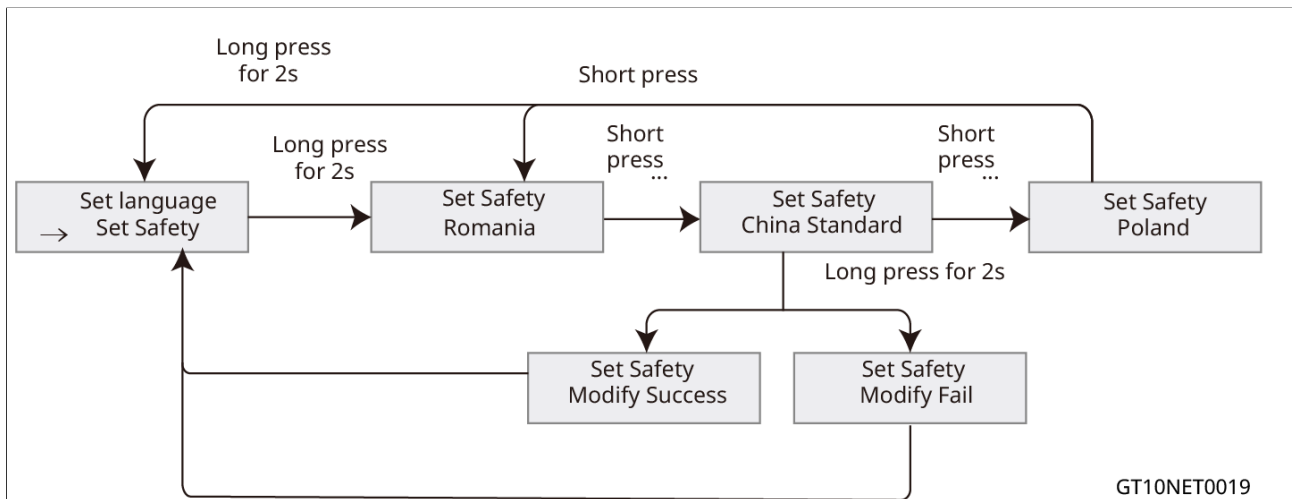

8.2.1 Display Menu Overview

This section describes the display menu structure to help you navigate the menu levels, view inverter information, and configure inverter parameters.

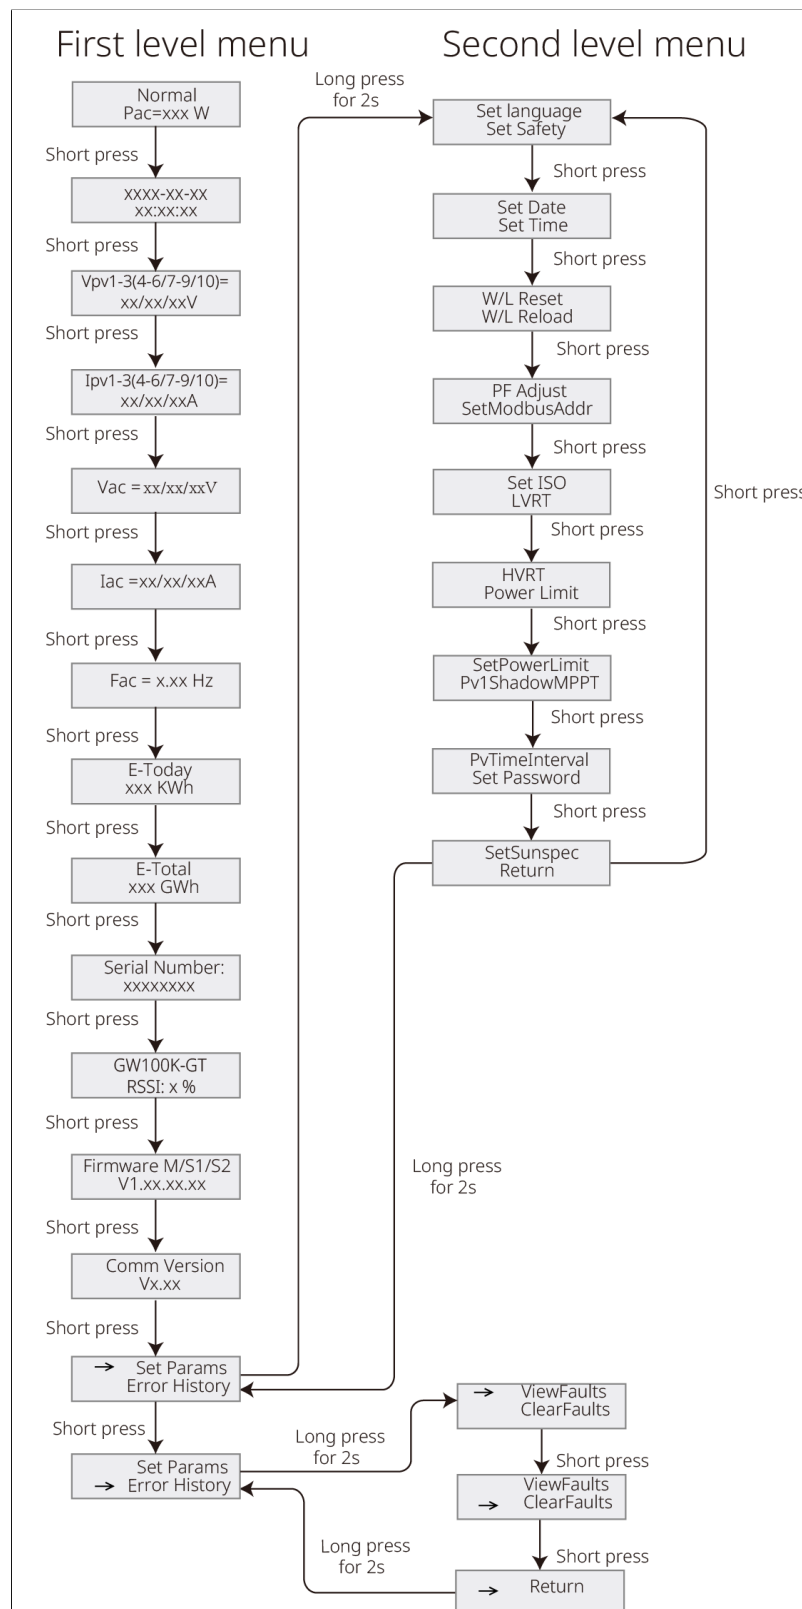

8.2.2 Inverter Parameter Overview

Parameter Name	Description
Grid-Connected Power Generation Power = 0 W	Standby screen showing the inverter's real-time power.
Date and Time	View the date and time for the country/region where the inverter is located.
Input Voltage	View the inverter's DC input voltage.
Input Current	View the inverter's DC input current.
Grid Voltage	View the grid voltage.
Output Current	View the inverter's AC output current.
Grid Frequency	View the grid frequency.
Daily Energy Yield	View the system's energy yield for the current day.
Total Energy Yield	View the system's total energy yield.
Serial Number	View the inverter's serial number.
GW100K-GT Signal Strength	View the communication module's signal strength (Signal strength: xx%).
Firmware Version	View the inverter's firmware version.
Communication Version	View the inverter's ARM software version.
Safety Settings	Configure according to the grid standards of the country/region where the inverter is installed and its actual application scenario.
Set Date	Set according to the local time in the country/region where the inverter is installed.
Set Time	

Parameter Name	Description
W/L Restart	Power-cycle the communication module.
W/L Reset	Restore the communication module to factory settings. After restoring factory settings, reconfigure the network parameters of the communication module.
Power Factor Adjustment	Set the inverter power factor according to actual requirements.
Set Modbus Address	Configure according to the Modbus address actually assigned to the inverter.
Set ISO	Set the PV-to-PE insulation resistance threshold. An ISO fault is reported if the measured value is below the set threshold.
Low-Voltage Ride-Through	When enabled, the inverter will not immediately disconnect from the grid during a brief low-voltage grid event and can remain connected for a period of time.
High-Voltage Ride-Through	When enabled, the inverter will not immediately disconnect from the grid during a brief high-voltage grid event and can remain connected for a period of time.
Power Limit Enable	Set according to the power that can actually be fed into the grid.
Set Power Limit	
Shadow Mode	If the PV modules are heavily shaded, enable the shadow scan function.
Password Settings	The inverter password can be changed. Be sure to remember the new password. If you forget it, contact GoodWe After-Sales Service.
Set SunSpec	Configure the SunSpec protocol according to actual communication requirements.
View Faults	View the inverter's historical alarm records.
Clear Faults	Clear the inverter's historical alarm records.

8.3 Configuring Inverter Parameters via the App

SolarGo App is a mobile application that communicates with the inverter via a Bluetooth module, WiFi module, WiFi/LAN module, 4G module, or GPRS module. Its commonly used functions include:

1. Viewing inverter operating data, software versions, alarm information, and more.
2. Configuring inverter grid parameters, communication parameters, and more.
3. Maintaining the equipment.

For detailed information about the functions, see the SolarGo App User Manual. You can download the user manual from the official website or scan the QR code below.



SolarGo App




SolarGo App User Manual

8.4 Monitoring the PV Plant via SEMS+

SEMS+ is a monitoring platform that communicates with devices via WiFi, LAN, or 4G. The following are some commonly used SEMS+ functions:

1. Manage organizations, user information, and more.
2. Add and monitor PV plant information, and more.
3. Maintaining the equipment.

Scan the QR code below to download and install.

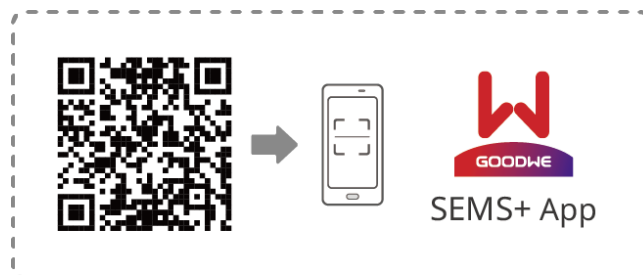

SEMS0164

For details about the functions, see the SEMS+ User Manual. The user manual is available on the official website or by scanning the QR code below.



9 System Maintenance

9.1 De-Energizing the Inverter

DANGER

- Before performing maintenance on the inverter, power it off. Working on energized equipment may damage the inverter or pose an electric shock hazard.
- After the inverter is powered off, its internal components take some time to discharge. Wait until the equipment has fully discharged, as specified on the label.

Step 1: (Recommended) Send a command to the inverter to stop grid connection.

Step 2: Open the AC switch between the inverter and the grid.

Step 3: Open the inverter's DC switch.

9.2 Removing the Inverter

WARNING

- Make sure the inverter is powered off.
- Wear personal protective equipment when working on the inverter.

Step 1: Disconnect all electrical connections to the inverter, including the DC cables, AC cables, communication cables, communication module, and protective earth cable.

Step 2: Remove the inverter from the mounting bracket.

Step 3: Remove the mounting bracket.

Step 4: Store the inverter properly. If it will be used again, ensure that the storage conditions meet the requirements.

9.3 Decommissioning the Inverter

If the inverter can no longer be used and must be disposed of, follow the electrical waste disposal requirements specified by the laws and regulations of the country/region where the inverter is located. Do not dispose of the inverter as household waste.

9.4 Troubleshooting

Troubleshoot using the methods below. If these methods do not resolve the issue, contact the after-sales service center.

When contacting the after-sales service center, collect the following information to help resolve the issue quickly.

1. Inverter information, such as the serial number, software version, equipment installation date, time of fault occurrence, and fault frequency.
2. Equipment installation environment, such as weather conditions and whether the PV modules are obstructed or shaded. Photos, videos, or other files showing the installation environment can help with troubleshooting.
3. Grid conditions.

No.	Fault Name	Fault Cause	Corrective Action
1	Grid Power Failure	1. Grid power outage. 2. The AC line or AC switch is disconnected.	1. The alarm will clear automatically once grid power is restored. 2. Check whether the AC line or AC switch is disconnected.

2	Grid Overvoltage Protection	The grid voltage is above the allowable range, or the duration of the overvoltage exceeds the high-voltage ride-through setting.	1. If this occurs occasionally, it may be due to a brief grid abnormality. The inverter will resume normal operation after detecting that the grid is normal; no manual intervention is required. 2. If this occurs frequently, check whether the grid voltage is within the permitted range. • If the grid voltage is outside the allowable range, contact your local utility. • If the grid voltage is within the allowable range, adjust the grid voltage only with approval from your local utility. 3. If normal operation does not resume after an extended period, check that the AC-side circuit breaker and output cables are properly connected.
---	-----------------------------	--	--

3	Fast Grid Overvoltage Protection	A grid abnormality or excessively high voltage has triggered a fault.	1. If this occurs occasionally, it may be due to a brief grid abnormality. The inverter will resume normal operation after detecting that the grid is normal; no manual intervention is required. 2. If this occurs frequently, check whether the grid voltage is within the permitted range. • If the grid voltage is outside the allowable range, contact your local utility. • If the grid voltage is within the allowable range, adjust the grid voltage only with approval from your local utility. 3. If normal operation does not resume after an extended period, check that the AC-side circuit breaker and output cables are properly connected.
---	----------------------------------	---	--

4	Grid Undervoltage Protection	The grid voltage is below the allowable range, or the duration of the undervoltage exceeds the low-voltage ride-through setting.	1. If this occurs occasionally, it may be due to a brief grid abnormality. The inverter will resume normal operation after detecting that the grid is normal; no manual intervention is required. 2. If this occurs frequently, check whether the grid voltage is within the permitted range. • If the grid voltage is outside the allowable range, contact your local utility. • If the grid voltage is within the allowable range, adjust the grid voltage only with approval from your local utility. 3. If normal operation does not resume after an extended period, check that the AC-side circuit breaker and output cables are properly connected.
---	------------------------------	--	--

5	10-Minute Overvoltage Protection	The 10-minute sliding average of the grid voltage is outside the range specified by the applicable standards.	1. If this occurs occasionally, it may be due to a brief grid abnormality. The inverter will resume normal operation after detecting that the grid is normal; no manual intervention is required. 2. Check whether the grid voltage remains high over an extended period. If this occurs frequently, check whether the grid voltage is within the allowable range. • If the grid voltage is outside the allowable range, contact your local utility. • If the grid voltage is within the allowable range, adjust the 10-minute grid overvoltage protection threshold only with approval from your local utility.
6	Grid Overfrequency Protection	The grid is abnormal: its actual frequency is higher than the local grid standard requires.	1. If this occurs occasionally, it may be due to a brief grid abnormality. The inverter will resume normal operation after detecting that the grid is normal; no manual intervention is required. 2. If this occurs frequently, check whether the grid frequency is within the allowable range. • If not, contact your local utility. • If it is, adjust the grid overfrequency protection threshold only with approval from your local utility.

7	Grid Underfrequency Protection	The grid is abnormal: its actual frequency is lower than the local grid standard requires.	1. If this occurs occasionally, it may be due to a brief grid abnormality. The inverter will resume normal operation after detecting that the grid is normal; no manual intervention is required. 2. If this occurs frequently, check whether the grid frequency is within the allowable range. • If not, contact your local utility. • If it is, adjust the grid underfrequency protection threshold only with approval from your local utility.
8	Anti-islanding protection	The grid has been disconnected. Grid voltage is maintained by the load, so grid connection is stopped in accordance with safety requirements.	The inverter will reconnect to the grid once the grid has returned to normal.
9	Voltage Ride-Through Undervoltage Fault	Grid fault: the grid voltage has remained abnormal longer than the LVRT-specified duration.	1. If this occurs occasionally, it may be due to a brief grid abnormality. The inverter will resume normal operation after detecting that the grid is normal; no manual intervention is required. 2. If this occurs frequently, check whether the grid voltage is within the permitted range. If it is not, contact your local utility. If it is, contact your dealer or after-sales service center.
10	Voltage ride-through overvoltage fault	Grid fault: the grid voltage has remained abnormal longer than the HVRT-specified duration.	
11	30 mA GFCI protection		

12	60 mA GFCI protection	During inverter operation, the input-to-ground insulation resistance is low.	1. If this occurs occasionally, it may be caused by a temporary external circuit fault. The inverter will resume normal operation once the fault is cleared; no manual intervention is required. 2. If this occurs frequently or does not clear for an extended period, check whether the PV string-to-ground insulation resistance is too low.
13	150 mA GFCI protection		
14	GFCI gradual-change protection		
15	DCI Level 1 protection	The DC component of the inverter output current exceeds the range permitted by safety regulations or the machine's default settings.	1. If the abnormality is caused by an external fault (such as a grid or frequency fault), the inverter will automatically resume normal operation once the fault clears; no manual intervention is required. 2. If this alarm occurs frequently and affects normal power generation at the plant, contact your dealer or after-sales service center.
16	DCI Level 2 protection		
17	Low insulation resistance	1. A PV string is short-circuited to protective earth. 2. The PV string installation environment is persistently humid, and the wiring has poor insulation to ground.	1. Check the impedance between the PV string and protective earth. If a short circuit is found, correct the short-circuit fault. 2. Check that the inverter's protective earth conductor is connected correctly. 3. If you confirm that the impedance is indeed below the default value in rainy conditions, reset the "Insulation Resistance Protection Threshold."

18	System grounding fault	1. The inverter's protective earth conductor is not connected. 2. When the PV string output is grounded, no isolation transformer is connected on the inverter output side.	1. Check whether the inverter's protective earth conductor is connected correctly. 2. If the PV string output is grounded, check whether an isolation transformer is connected on the inverter output side.
19	Live conductor-to-ground short circuit	Low impedance or short circuit between an output phase conductor and PE	Measure the impedance between the output phase conductors and PE, locate any points with low impedance, and repair them.
20	Hardware anti-backflow protection	Abnormal load fluctuations	1. If the abnormality is caused by an external fault, the inverter will automatically resume normal operation once the fault is cleared; no manual intervention is required. 2. If this alarm occurs frequently and affects normal power generation at the plant, contact your distributor or after-sales service center.
21	Internal communication link failure	1. Chip is not powered on 2. Chip program version error	Open the AC output-side switch and DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your distributor or after-sales service center.
22	AC sensor self-test abnormality	Abnormal sampling by the AC sensor	Open the AC output-side switch and DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your distributor or after-sales service center.

23	Leakage current sensor self-test abnormality	Abnormal sampling by the leakage current sensor	Open the AC output-side switch and DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your distributor or after-sales service center.
24	Relay self-test abnormality	1. Relay abnormality (relay short circuit) 2. Control circuit abnormality 3. Abnormal AC-side wiring (possible loose connection or short circuit)	Open the AC output-side switch and DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your distributor or after-sales service center.
25	Internal fan abnormality	1. Fan power supply abnormality 2. Mechanical fault (locked rotor) 3. Fan wear or damage	Open the AC output-side switch and DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your distributor or after-sales service center.
26	External fan abnormality		
27	Flash read/write error	Internal Flash storage abnormality	Open the AC output-side switch and DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your distributor or after-sales service center.

28	DC arc fault	1. DC string connector terminals are not securely connected. 2. DC wiring is damaged.	Check that the string cables are in good condition, correctly wired, and making good contact.
29	DC arc-fault self-test failure	Arc-fault detection device abnormality	Open the AC output-side switch and DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your distributor or after-sales service center.
30	INV power module overtemperature	1. The inverter installation location is poorly ventilated. 2. The ambient temperature is too high. 3. The internal fan is malfunctioning.	1. Check whether the inverter installation location is well ventilated and whether the ambient temperature exceeds the maximum permitted ambient temperature range. 2. If ventilation is inadequate or the ambient temperature is too high, improve ventilation and heat dissipation. 3. If ventilation and ambient temperature are both normal, contact your dealer or after-sales service center.
31	1.5 V reference abnormality	Reference circuit fault	Open the AC output-side switch and DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your distributor or after-sales service center.
32	0.3 V reference abnormality	Reference circuit fault	
33	DC bus overvoltage		

34	Upper DC bus overvoltage	1. PV voltage too high 2. Abnormal inverter BUS voltage sampling 3. Poor isolation performance of the dual-split transformer downstream of the inverter causes interference between two inverters when they are connected to the grid. One inverter reports a DC overvoltage fault when connecting to the grid.	Open the AC output-side switch and DC input-side switch. After 5 minutes, close the AC output-side switch and DC input-side switch. If the fault persists, contact your dealer or after-sales service center.
35	Lower DC bus overvoltage		
36	BUS overvoltage (secondary CPU 1)		
37	PBUS overvoltage (secondary CPU 1)		
38	NBUS overvoltage (secondary CPU 1)		
39	PV input overvoltage	Incorrect PV array configuration; too many PV modules are connected in series in the string.	Check the series configuration of the corresponding PV array string and ensure that its open-circuit voltage does not exceed the inverter's maximum operating voltage.
40	Persistent PV hardware overcurrent	1. Improper module configuration 2. Hardware damaged	Open the AC output-side switch and DC input-side switch. After 5 minutes, close the AC output-side switch and DC input-side switch. If the fault persists, contact your dealer or after-sales service center.

41	PV Sustained Software Overcurrent	1. Improper module configuration 2. Hardware damaged	Open the AC output-side switch and DC input-side switch. After 5 minutes, close the AC output-side switch and DC input-side switch. If the fault persists, contact your dealer or after-sales service center.
42	String reverse connection (strings 1-16)	PV String Reverse Polarity	Check whether any strings are connected with reverse polarity.
43	Low PV Voltage	Low irradiance or abnormal changes in irradiance	1. If this occurs occasionally, it may be caused by abnormal irradiance. The inverter will automatically resume normal operation; no manual intervention is required. 2. If this occurs frequently, contact your dealer or after-sales service center.
44	Low DC Bus Voltage	Low irradiance or abnormal changes in irradiance	1. If this occurs occasionally, it may be caused by abnormal irradiance. The inverter will automatically resume normal operation; no manual intervention is required. 2. If this occurs frequently, contact your dealer or after-sales service center.
45	DC Bus Soft Start Failure	Boost Drive Circuit Fault	Open the AC output-side switch and the DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your dealer or after-sales service center.
46	DC Bus Voltage Imbalance	1. Inverter sampling circuit fault. 2. Hardware fault.	Open the AC output-side switch and the DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your dealer or after-sales service center.

47	Grid Phase-Locked Loop Failure	Grid frequency is unstable	Open the AC output-side switch and the DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your dealer or after-sales service center.
48	Sustained Inverter Overcurrent	A brief change in the grid or load caused control overcurrent	No action is required if this occurs occasionally. If this alarm occurs frequently, contact your dealer or after-sales service center.
49	Inverter Software Overcurrent		
50	R-Phase Inverter Hardware Overcurrent		
51	S-Phase Inverter Hardware Overcurrent		
52	T-Phase Inverter Hardware Overcurrent		
53	PV Single-Event Hardware Overcurrent	Low irradiance or abnormal changes in irradiance	Open the AC output-side switch and the DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your dealer or after-sales service center.
54	PV Single-Event Software Overcurrent		

55	PV HCT Fault	Boost Current Sensor Fault	Open the AC output-side switch and the DC input-side switch. After 5 minutes, close both switches. If the fault persists, contact your dealer or our customer service center.
56	Cavity temperature too high	1. The inverter installation location is not well ventilated. 2. The ambient temperature is too high. 3. The internal fan is operating abnormally	1. Check whether the inverter installation location is well ventilated and whether the ambient temperature exceeds the maximum permitted ambient temperature range. 2. If ventilation is inadequate or the ambient temperature is too high, improve ventilation and heat dissipation. 3. If ventilation and ambient temperature are both normal, contact your dealer or GoodWe Customer Service Center.
58	String loss (String 1-String 16)	String fuse open (if applicable)	Check whether the fuse is open

9.5 Periodic Maintenance

DANGER

Before performing maintenance on the inverter, power it off. Working on energized equipment may damage the inverter or pose an electric shock hazard.

Maintenance Item	Maintenance Procedure	Maintenance Interval
System Cleaning	Check the heatsink and air inlets/outlets for foreign objects and dust.	Once every 6 months to once a year
Fan	Check that the fan operates normally, makes no unusual noise, and is in good condition.	Once a year


DC Switch	Switch the DC switch on and off 10 times in succession to ensure it functions properly.	Once a year
Electrical Connections	Check electrical connections for looseness and cables for visible damage or exposed copper.	Once every 6 months to once a year
Sealing	Check that the seals around the equipment cable entry holes meet the requirements. If gaps are too large or the holes are unsealed, reseal them.	Once a year

Fan Maintenance

Refer to the following steps for fan maintenance:

GT series inverters are equipped with an external fan module that slides into the back of the inverter from the left side. Clean this fan with a vacuum cleaner once a year. For thorough cleaning, remove the fan from the unit before cleaning it.

1. Disconnect the AC switch between the inverter and the grid, then disconnect the inverter's DC switch.
2. Wait for the residual voltage to dissipate and the fan to stop, as indicated on the label.
3. Clean the fan.
 - Use a screwdriver to remove the screws and pull out the fan;
 - Pull out the entire external fan module; do not remove individual fans.
4. Clean with a soft-bristled brush, cloth, or vacuum cleaner.
5. After cleaning, reassemble the fan and tighten the screws.

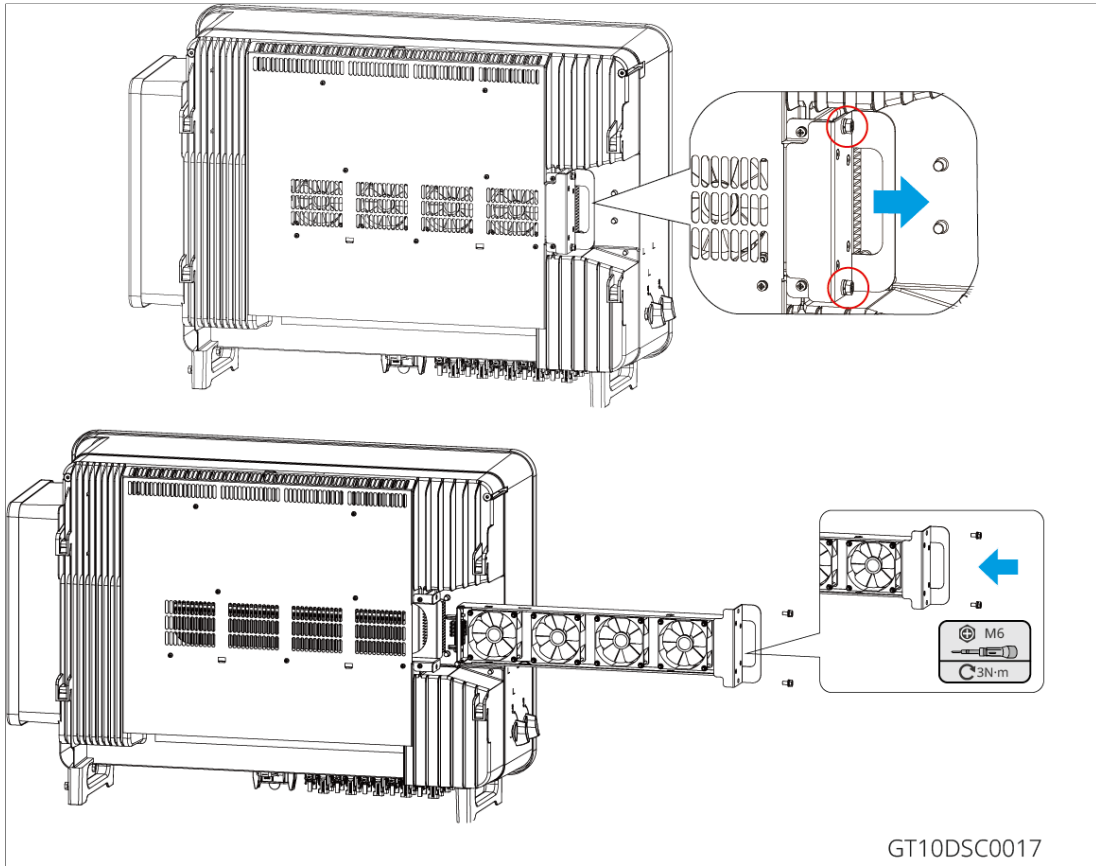

10 Technical Specifications

Technical Data		GW75K-GT-LV-G10
Input		
Max. Input Power (kW)		150
Max. Input Voltage (V)		800
MPPT Operating Voltage Range (V)		180~800
MPPT Voltage Range at Nominal Power (V)		250~650
Start-up Voltage (V)		200
Nominal Input Voltage (V)		370
Max. Input Current per MPPT (A)		42
Max. Short Circuit Current per MPPT (A)		52.5
Max. Backfeed Current to The Array (A)		0
Number of MPP Trackers		8
Number of Strings per MPPT		2
Output		
Nominal Output Power (kW)		75

Nominal Output Apparent Power (kVA)	75
Max. AC Active Power (kW) ^{*3}	75 ^{*6}
Max. AC Apparent Power (kVA) ^{*3}	75
Nominal Power at 40°C (kW)	75
Max. Power at 40°C (Including AC Overload) (kW)	75
Nominal Output Voltage (V)	127/220,3L/N/PE or 3L/PE ^{*7}
Output Voltage Range (V)	176~245
Nominal AC Grid Frequency (Hz)	50/60
AC Grid Frequency Range (Hz)	45-55/55-65
Max. Output Current (A) ^{*5}	196.9
Max. Output Fault Current (Peak and Duration) (A)	364A@5μs
Inrush Current (Peak and Duration)(A)	120A@1μs
Nominal Output Current (A)	196.9
Power Factor	~1 (Adjustable from 0.8 leading to 0.8 lagging)

Max. Total Harmonic Distortion	<3%
Maximum Output Overcurrent Protection (A)	340
Efficiency	
Max. Efficiency	98.80%
European Efficiency	98.30%
Protection	
PV String Current Monitoring	Integrated
PV Insulation Resistance Detection	Integrated
Residual Current Monitoring	Integrated
PV Reverse Polarity Protection	Integrated
Anti-islanding Protection	Integrated
AC Overcurrent Protection	Integrated
AC Short Circuit Protection	Integrated
AC Overvoltage Protection	Integrated
DC Switch	Integrated
DC Surge Protection	Type II
AC Surge Protection	Type II
AFCI	Optional* ⁸
Rapid Shutdown	Optional

Remote Shutdown	Integrated
PID Recovery	Optional
Power Supply at Night	Optional
I-V Curve Dianosis	Optional
General Data	
Operating Temperature Range (°C)	-30 ~ +60
Storage Temperature (°C)	-40 ~ +70
Operating Environment	Outdoor
Relative Humidity	0 ~ 100%
Max. Operating Altitude (m)	4000
Cooling Method	Smart Fan Cooling
User Interface	LED, LCD (Optional) , WLAN+APP
Communication	RS485, WiFi+LAN
Communication Protocols	Modbus-RTU (SunSpec Compliant)
Weight (kg)	88
Dimension (W×H×D mm)	930×650×300
Noise Emission (dB)	<70
Topology	Non-isolated
Self-consumption at Night (W)	<1
Ingress Protection Rating	IP66
Anti-corrosion Class	C4, C5 (Optional)

DC Connector	MC4 (4~6mm ²)
AC Connector	OT/DT terminal (Max. 240 mm ²)
Environmental Category	4K4H
Pollution Degree	III
Overvoltage Category	DCII / ACIII
Protective Class	I
The Decisive Voltage Class (DVC)	PV: C
	AC: C
	com: A
Active Anti-islanding Method	AFDPF + AQDPF
Country of Manufacture	China

Technical Data	GW100K-GT	GW110K-GT	GW125K-GT
Input			
Max. Input Power (kW)	150	165	187.5
Max. Input Voltage (V)	1100*11	1100*11	1100*11
MPPT Operating Voltage Range (V)	180~1000		
MPPT Voltage Range at Nominal Power (V)	500~850V @380V/400Vac, 600~850V @480Vac		
Start-up Voltage (V)	200		

Nominal Input Voltage (V)	600V @380/400Vac, 720V @480Vac		
Max. Input Current per MPPT (A)	42		
Max. Short Circuit Current per MPPT (A)	52.5		
Max. Backfeed Current to The Array (A)	0		
Number of MPP Trackers	8	10	10
Number of Strings per MPPT	2		
Output			
Nominal Output Power (kW)	100*1	110	125
Nominal Output Apparent Power (kVA)	100*1	110	125
Max. AC Active Power (kW)*3	100*1	121*4	137.5*2
Max. AC Apparent Power (kVA)*3	100*1	121*4	137.5*2
Nominal Power at 40°C (kW)	100	110	125
Max. Power at 40°C (Including AC Overload) (kW)	100	110	125
Nominal Output Voltage (V)	220/380, 230/400, 277/480, 3L/N/PE or 3L/PE		

Output Voltage Range (V)	304~528		
Nominal AC Grid Frequency (Hz)	50/60		
AC Grid Frequency Range (Hz)	45-55/55-65		
Max. Output Current (A)*5	167.1@380V 158.8@400V 132.3@480V	183.4@380V 174.7@400V 145.5@480V	199.4@380V 198.5@400V 165.4@480V
Max. Output Fault Current (Peak and Duration) (A)	364@5μs		
Inrush Current (Peak and Duration)(A)	120@1μs		
Nominal Output Current (A)	152.0@380V 145.0@400V 120.3@480V	167.1@380V 159.5@400V 132.3@480V	189.9@380V 181.2@400V 150.4@480V
Power Factor	~1 (Adjustable from 0.8 leading to 0.8 lagging)		
Max. Total Harmonic Distortion	<3%		
Maximum Output Overcurrent Protection (A)	340		
Efficiency			
Max. Efficiency	98.8%	98.8%	99.0%
European Efficiency	98.4%	98.4%	98.5%
CEC Efficiency	98.3%	98.3%	98.4%
Protection			

PV String Current Monitoring	Integrated	Integrated	Integrated
PV Insulation Resistance Detection	Integrated	Integrated	Integrated
Residual Current Monitoring	Integrated	Integrated	Integrated
PV Reverse Polarity Protection	Integrated	Integrated	Integrated
Anti-islanding Protection	Integrated	Integrated	Integrated
AC Overcurrent Protection	Integrated	Integrated	Integrated
AC Short Circuit Protection	Integrated	Integrated	Integrated
AC Overvoltage Protection	Integrated	Integrated	Integrated
DC Switch	Integrated	Integrated	Integrated
DC Surge Protection	Type II (Type I + II Optional)		
AC Surge Protection	Type II		
AFCI	Optional* ⁹	Optional* ⁹	Optional* ⁹
Emergency Power Off	Optional	Optional	Optional
Rapid Shutdown	Optional	Optional	Optional
Remote Shutdown	Optional	Optional	Optional
PID Recovery	Optional	Optional	Optional
Reactive Power Compensation at Night	Optional	Optional	Optional

Power Supply at Night	Optional*10	Optional*10	Optional*10
I-V Curve Scan	Optional	Optional	Optional
I-V Curve Diagnosis	Optional	Optional	Optional
General Data			
Operating Temperature Range (°C)	-30 ~ +60		
Storage Temperature (°C)	-40 ~ +70		
Operating Environment	Outdoor		
Relative Humidity	0 ~ 100%		
Max. Operating Altitude (m)	4000		
Cooling Method	Smart Fan Cooling		
User Interface	LED, LCD (Optional) , WLAN+APP		
Communication	RS485, WiFi+LAN or 4G		
Communication Protocols	Modbus-RTU (SunSpec Compliant)		
Weight (kg)	85	88	88
Dimension (W×H×D mm)	930×650×300		
Noise Emission (dB)	<70		
Topology	Non-isolated		
Self-consumption at Night (W)	<2		
Ingress Protection Rating	IP66		

Anti-corrosion Class	C4, C5 (Optional)
DC Connector	MC4 (4~6mm ²)
AC Connector	OT/DT terminal (Max. 240 mm ²)
Environmental Category	4K4H
Pollution Degree	III*12
Overvoltage Category	DCII / ACIII
Protective Class	I
The Decisive Voltage Class (DVC)	PV: C AC: C com: A
Active Anti-islanding Method	AFDPF + AQDPF
Country of Manufacture	China

*1: For Australia is 99.99kW/KVA.

*2: For VDE4105 Max. AC Active Power(kW) and Max. AC Apparent Power(kVA): GW125K-GT is 134.9.

*3: For Chile and Brazil Max AC Active Power (kW) and Max. AC Apparent Power (kVA): GW100K-GT is 100; GW110K-GT is 110; GW125K-GT is 125.

*4: For Australia is 110kW/kVA.

*5: For Australia Max. Output Current (A): GW100K-GT is 145@400V; GW110K-GT is 159.5@400V.

*6: For Colombia Max.AC Active Power (kW) : GW75K-GT-LV-G10 is 70.9@208V.

*7: For Colombia Nominal Output Voltage (V) : GW75K-GT-LV-G10 is 120/208, 3L/N/PE or 3L/PE.

*8: For Brazil, Colombia and Mexico is Integrated.

*9: For Australia , Brazil and Mexico, GW100K-GT/GW110K-GT/GW125K-GT AFCI: Integrated.

*10: For Australia, GW100K-GT/GW110K-GT/GW125K-GT Power Supply at Night: Integrated.

*11: When the input voltage ranges from 1000V to 1100V, the inverter will enter the standby state. When the input voltage returns to the MPPT operating voltage range, the inverter will resume normal operating state.

*12: : For Australia, Pollution Degree: PD 3(External), PD 2(Internal).

11 Terminology

Definitions of overvoltage categories

Overvoltage category I: Equipment connected to circuits that incorporate measures to limit transient overvoltages to a relatively low level.

Overvoltage category II: Energy-consuming equipment supplied by fixed electrical installations. This category includes appliances, portable tools, and other household and similar loads. Where special requirements apply to the reliability and suitability of such equipment, overvoltage category III applies.

Overvoltage category III: Equipment in fixed electrical installations, for which reliability and suitability must meet special requirements. This includes switching devices in fixed installations and industrial equipment permanently connected to fixed installations.

Overvoltage category IV: Equipment used at the supply source of an electrical installation, including measuring instruments and upstream overcurrent protection devices.

Definitions of wet-location categories

Environmental parameter	Class		
	3K3	4K2	4K4H
Temperature range	0~+40°C	-33~+40°C	-33~+40°C
Humidity range	5% to 85%	15% to 100%	4% to 100%

Description of environmental categories:

Outdoor inverter: Ambient air temperature range of -25 to +60°C; suitable for environments with Pollution Degree 3;

Indoor Type II inverter: Ambient air temperature range of -25 to +40°C; suitable for environments with Pollution Degree 3;

Indoor Type I inverter: Ambient air temperature range of 0 to +40°C; suitable for environments with Pollution Degree 2;

Description of pollution degree categories

Pollution Degree 1: No pollution or only dry, non-conductive pollution;

Pollution Degree 2: Normally, only non-conductive pollution is present; however, temporary conductivity caused by condensation must be taken into account;

Pollution Degree 3: Conductive pollution is present, or non-conductive pollution becomes conductive due to condensation;

Pollution Degree 4: Persistent conductive pollution, such as pollution caused by conductive dust, rain, or snow.

Contact Information

GoodWe Technologies Co., Ltd.
No. 90 Zijin Road, High-tech Zone, Suzhou, China
400-998-1212
www.goodwe.com
service@goodwe.com