


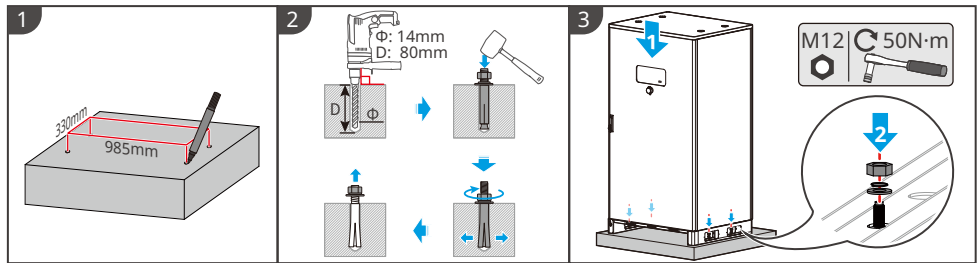


Procedure






Open the cabinet door / 打开柜门

Closing the cabinet door / 关闭柜门

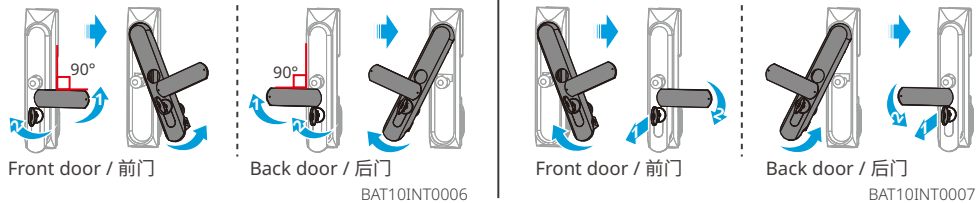


|   |                            |                            |                           |
|---|----------------------------|----------------------------|---------------------------|
| 2 | CS Elektrické připojení    | DE Elektroanschluss        | EN Electrical Connection  |
|   | ES Conexión eléctrica      | FR Raccordement électrique | HU Elektromos csatlakozás |
|   | IT Allacciamento elettrico | NL Elektrische aansluiting | PL Połączenie elektryczne |
|   | PT Ligação elétrica        | ZH 电气连接                    |                           |



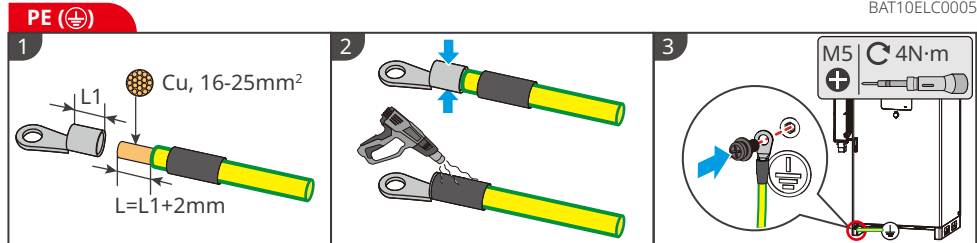
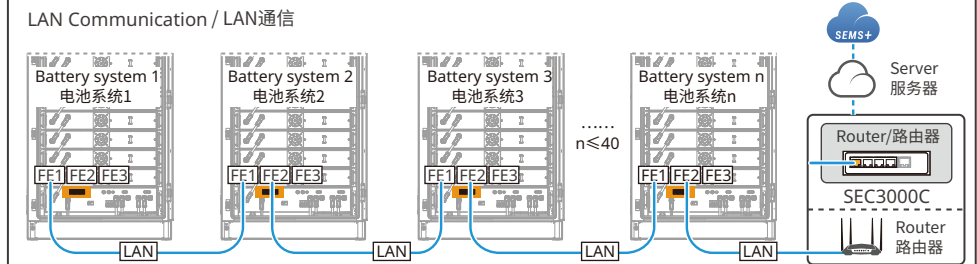
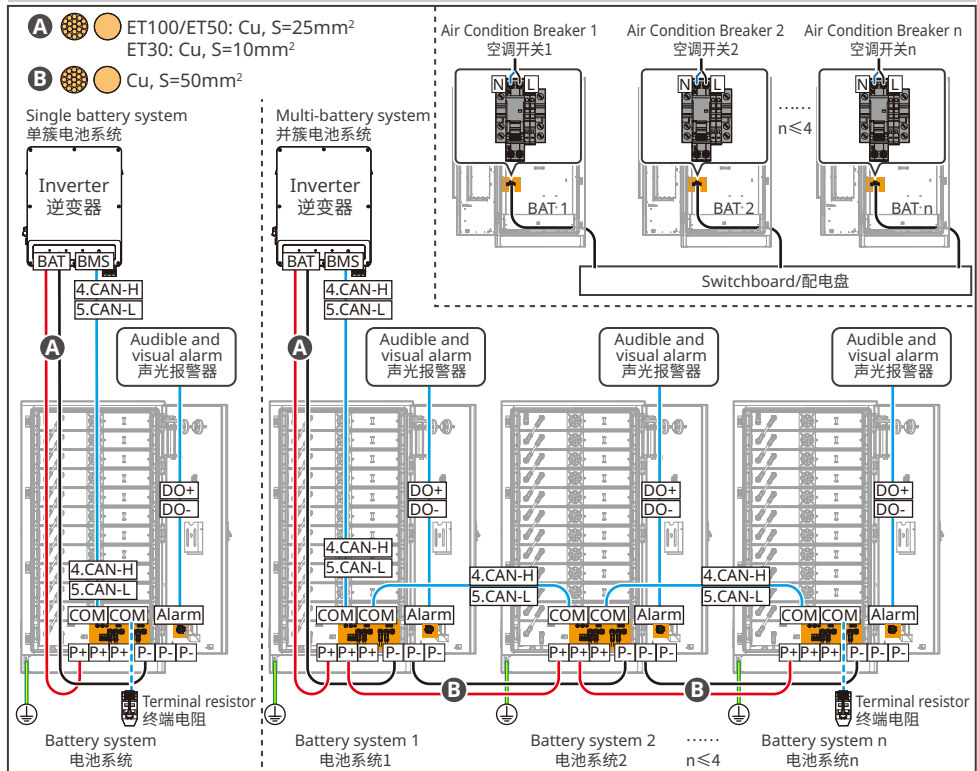


所有割开的走线孔都必须用防火泥封堵。  
All cut cable routing holes must be sealed with fireproof mud.

Introduction to routing holes inside the cabinet / 机柜内部走线孔介绍

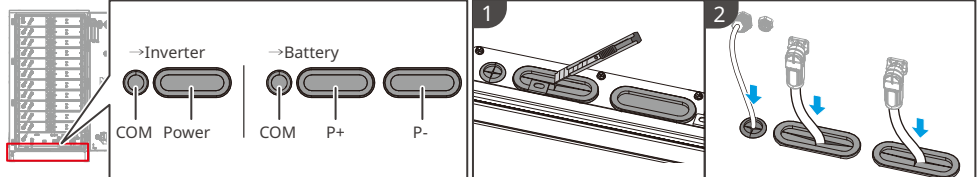

Introduction to routing holes on the cabinet side / 机柜侧面走线孔介绍

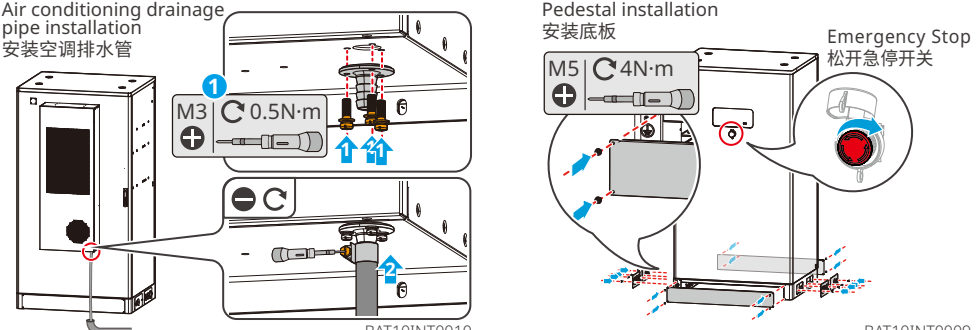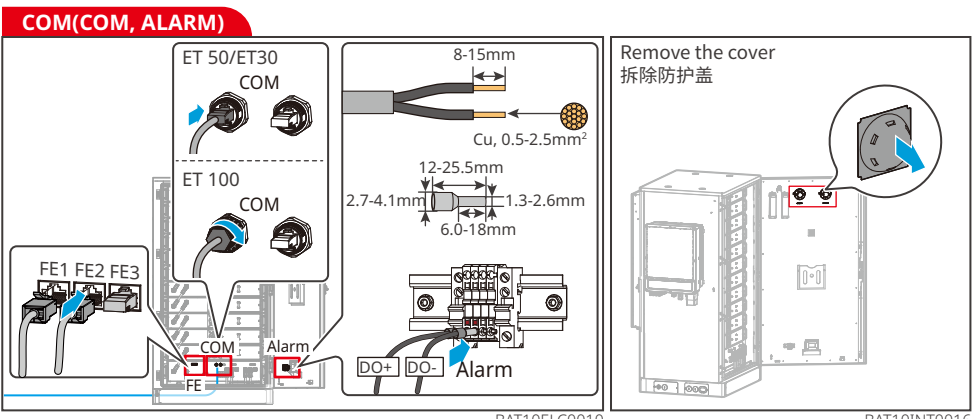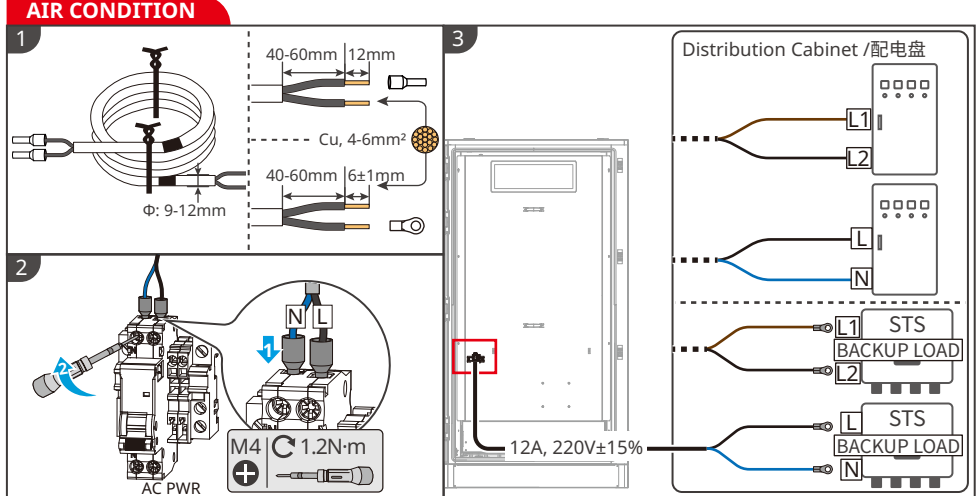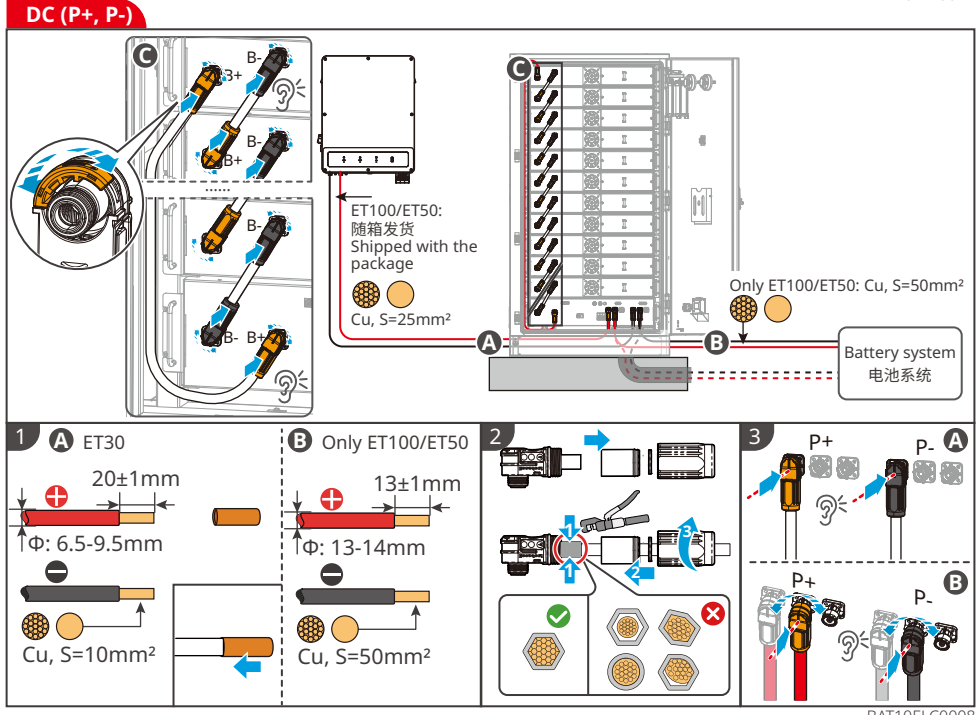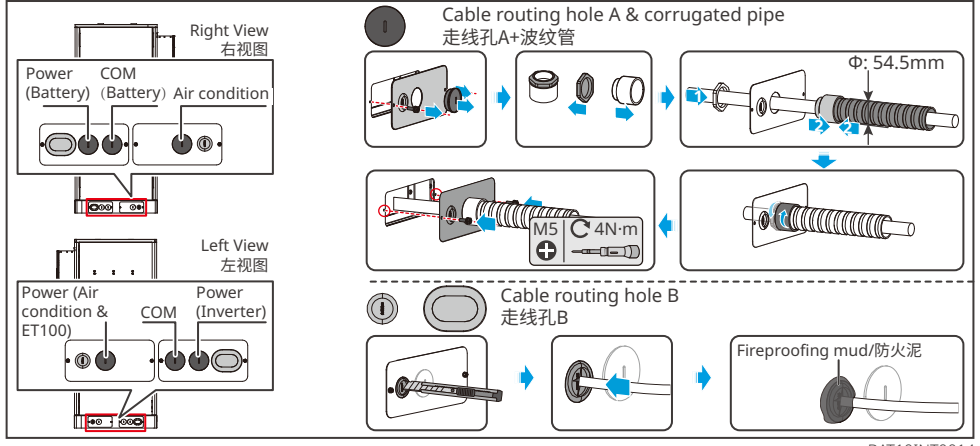

|   |                                      |                                               |
|---|--------------------------------------|-----------------------------------------------|
| 3 | CS Uvedení do provozu a monitorování | DE Inbetriebnahme und Überwachung             |
|   | EN Commissioning and Monitoring      | ES Puesta en marcha y supervisión             |
|   | FR Mise en service et surveillance   | HU Üzembe helyezés és felügyelet              |
|   | IT Messa in servizio e monitoraggio  | NL Ingebruikname en bewaking                  |
|   | PL Uruchamianie i monitorowanie      | PT Colocação em funcionamento e monitorização |
|   | ZH 调测                                |                                               |

